

# REVO 24|36



Owner's Manual  
Revo 2436  
MLAREVO2436220

[lagunatools.com](http://lagunatools.com) | [lagunacleanair.com](http://lagunacleanair.com) | [supermaxtools.com](http://supermaxtools.com)

## Registration

To prevent voiding this warranty, all products sold must be registered within thirty (30) days of receiving the product. All registered purchases will receive notifications about important product changes, receive customer service, and be able to file a warranty claim against defective workmanship, parts, or materials.

You must register your purchase! Please follow this link:

<https://lagunatools.com/policies/warranty/>

## Length of Warranty

All new machines and optional accessories sold through an authorized dealer carry a two-year warranty effective the date of receiving the product. Machines sold for either commercial or industrial use have a one-year warranty. Wearable parts like throat plates, band-saw guides, etc., have a ninety-day warranty.

Aside from being free of defects upon receiving, consumable parts, like cutters and abrasives, are not covered by this warranty unless otherwise stated by Laguna Tools. These parts are designed to be used at the expense of the operator and are available for replacement or inventory purchase. The determination of a consumable part will be made on a case-by-case basis by Laguna Tools.

2 Year – New Machines Sold Through an Authorized Dealer

2 Year – Accessories Sold as Machine Options (excluding blades)

1 Year – Machines Sold for Commercial or Industrial Use

1 Year – Blades and Accessories outside of Machine Options

90 Days – Wearable Parts

## Who is Covered

The applicable warranty covers only the initial purchaser of the product from the date of receiving the product. To file such claims, the original purchaser must present the original receipt as proof of purchase.

## What is Covered

The warranty covers any defects in the workmanship of all parts and materials that make up the machine unless otherwise specified. Any part, determined by Laguna Tools®, to have a defect will be repaired or replaced (and shipped), without charge. The defective item must be returned to Laguna Tools with the complaint and proof of purchase and in the original packaging. In the event the item is determined to be not covered by this warranty, the customer will be responsible for the cost to replace the item/part and all related shipping charges.

## Warranty Limitations

This limited warranty does not apply to natural disasters, acts of terrorism, normal wear and tear, product failure due to lack of maintenance or cleaning, damage caused by accident, neglect, or inadequate dust collection. The warranty may be voided against proof of misuse/abuse, damage caused where repair or alterations have been made or attempted by others, using the product for purposes other than those described as intended use (unless with consent by Laguna Tools®), modification to the product, or use with an accessory that was not designed for the product. It is the responsibility of the user to understand basic woodworking machinery settings and procedures and to properly maintain the equipment in accordance with the standards provided in this manual.

## Shipping Damage

Laguna Tools® is not responsible for damage or loss caused by a freight company or other circumstances not in the direct control of Laguna Tools. All shipping-related claims for loss or damage goods must be made to Laguna Tools within twenty-four hours of delivery.

## How to Receive Support

To file a warranty claim, please contact the warranty department at 1-949-474-1200. To receive customer service or technical support please contact the customer service department at 1-800-332-4094. Warranty parts are shipped at the expense of Laguna Tools either by common carrier, FedEx ground services or similar method. Technical support to install replacement parts is primarily provided by phone, fax, email, or the Laguna Tools Customer Support Website.



2072 Alton Parkway Irvine, CA 92606 U.S.A.  
825 Bistline Drive, West Columbia, SC 29172 U.S.A  
For Customer Service: +1 (949) 474-1200 or email [customerservice@lagunatools.com](mailto:customerservice@lagunatools.com)

**Dear Craftsman:**

**Thank you for your purchase and welcome to the Laguna Tools group of discriminating craftsman. I understand that you have a choice of where to purchase your machines and appreciate the confidence you have in our products.**

**Every machine sold by Laguna Tools has been carefully designed and well thought through from a woodworker's perspective. I cut on our bandsaws, lathes, table saws, combination machines, and CNC routers and Plasma machines. Through my hands-on experience, I work hard to make our machines better. I strive to give you machines that inspire you to create works of art; machines that are a joy to run and work on; machines that encourage your performance.**

**Today, we offer high-performance machines with innovative solutions that meet the needs of Craftsman and their ever-evolving craft.**

**I started Laguna Tools as a woodworker and craftsman; I still am and more.**

**Thank you again for becoming a Laguna Tools customer.**

**Torben Helshoj**

**President and Founder -Laguna Tools**

**Imagination, Innovation and Invention at Work.**

## Table of contents.

	<b>Page number</b>
<b>Safety Rules</b>	<b>4</b>
<b>Warranty</b>	<b>8</b>
<b>Noise emission</b>	<b>9</b>
<b>Specification sheet</b>	<b>10</b>
<b>Receiving your machine</b>	<b>11</b>
<b>Introduction to your machine</b>	<b>12</b>
<b>Parts of the machine</b>	<b>12</b>
<b>What you will receive with the machine</b>	<b>17</b>
<b>Where to locate your machine</b>	<b>19</b>
<b>Unpacking your machine</b>	<b>19</b>
<b>Assembly and setup</b>	<b>21</b>
<b>Maintenance</b>	<b>33</b>
<b>Troubleshooting</b>	<b>36</b>
<b>Electrical drawing</b>	<b>38</b>
<b>Exploded view drawings</b>	<b>41</b>

## Safety Rules.

### **"WARNING": For Your Own Safety Read Instruction Manual before Operating Lathe**

- (a) Wear eye protection.
- (b) Do not wear gloves, a necktie, or loose clothing.
- (c) Tighten all locks before operating.
- (d) Rotate work piece by hand before applying power.
- (e) Rough out work piece before installing on faceplate.
- (f) Do not mount split work piece or one containing a knot.
- (g) Use lowest speed when starting new work piece.

1. KEEP GUARDS IN PLACE and in working order.
2. REMOVE ADJUSTING KEYS AND WRENCHES. Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
3. KEEP WORK AREA CLEAN. Cluttered areas and benches invite accidents.
4. DON'T USE IN A DANGEROUS ENVIRONMENT. Don't use power tools in damp or wet locations, or expose them to rain. Keep work area well lighted.
5. KEEP CHILDREN AWAY. All visitors should be kept at a safe distance from the work area.
6. MAKE YOUR WORKSHOP KID PROOF with padlocks, master switches, or by removing starter keys.
7. DON'T FORCE TOOL. It will do the job better and safer at the rate for which it was designed.
8. USE RIGHT TOOL. Don't force tool or attachment to do a job for which it was not designed.
9. USE PROPER EXTENSION CORD. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating. The chart below shows the correct size to use depending on cord length and nameplate ampere rating. If in doubt, use the next heavier gauge. The smaller the gauge number, the heavier the cord.
10. WEAR PROPER APPAREL Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry which may get caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.
11. ALWAYS USE SAFETY GLASSES. Also use a face or dust mask if cutting operation is dusty. Everyday eyeglasses only have impact resistant lenses, they are NOT safety glasses.
12. SECURE WORK. Use clamps or a vise to hold the work when practical. It's safer than using your hand and it frees both hands to operate the tool.
13. DON'T OVERREACH. Keep proper footing and balance at all times.
14. MAINTAIN TOOLS WITH CARE. Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
15. DISCONNECT TOOLS before servicing and when changing accessories, such as blades, bits, cutters, and the like.
16. REDUCE THE RISK OF UNINTENTIONAL STARTING. Make sure power switch is in the OFF position before plugging the machine in.
17. USE RECOMMENDED ACCESSORIES. Consult the owner's manual for recommended accessories. The use of improper accessories may cause risk of injury to persons.
18. NEVER STAND ON TOOL Serious injury could occur if the tool is tipped or if the cutting tool is unintentionally contacted.
19. CHECK DAMAGED PARTS. Before further use of the tool, a guard or other part that is damaged should be carefully checked to determine that it will operate properly and perform its intended function - check for alignment of moving parts, binding of moving parts, breakage of parts, mounting, and any other conditions that may affect its operation. A guard or other part that is damaged should be properly repaired or replaced.
20. DIRECTION OF FEED. Feed work into a blade or cutter against the direction of rotation of the blade or cutter only.
21. NEVER LEAVE TOOL RUNNING UNATTENDED. TURN POWER OFF. Don't leave tool until it comes to a complete stop.

**Table A**

Ampere Rating		Volts	Total length of cord in feet			
		120	25	50	100	150
		240	50	100	200	300
More Than	Not More Than		Minimum gage for cord			
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Not Recommended	

## Grounding Instructions.

1. All grounded, cord-connected tools:  
In the event of a malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This tool is equipped with an electric cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into a matching outlet that is properly installed and grounded in accordance with all local codes and ordinances.  
Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

Improper connection of the equipment-grounding conductor can result in a risk of electric shock. The conductor with insulation having an outer surface that is green with or without yellow stripes is the equipment-grounding conductor. If repair or replacement of the electric cord or plug is necessary, do not connect the equipment-grounding conductor to a live terminal.

Check with a qualified electrician or service personnel if the grounding instructions are not completely understood, or if in doubt as to whether the tool is properly grounded.

Use only 3-wire extension cords that have 3-prong grounding plugs and 3 pole receptacles that accept the tool's plug.

Repair or replace a damaged or worn cord immediately.

2. Grounded, cord-connected tools intended for use on a supply circuit having a nominal rating between 150 – 250 volts, inclusive:

This tool is intended for use on a circuit that has an outlet that looks like the one illustrated in Sketch D. The tool has a grounding plug that looks like the plug illustrated in Sketch D. Make sure the tool is connected to an outlet having the same configuration as the plug. No adapter is available or should be used with this tool. If the tool must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel; and after reconnection, the tool should comply with all local codes and ordinances.

#### Grounding methods

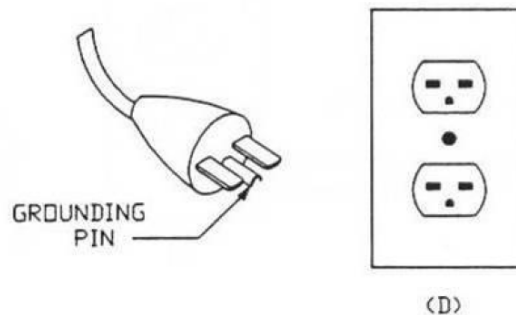


Fig 1

## Règles de sécurité

**"AVERTISSEMENT" : Pour votre sécurité, lire le manuel d'instruction attentivement avant d'utiliser le tour à bois.**

- |   |   |
|---|---|
| <ol style="list-style-type: none"> <li>(a) Portez des lunettes de protection.</li> <li>(b) Ne pas porter de gants, de cravate, ou de vêtements amples.</li> <li>(c) Serrer tous les verrous avant d'opérer la machine.</li> <li>(d) Tourner la pièce à la main avant d'appliquer le courant.</li> </ol> | <ol style="list-style-type: none"> <li>(e) Débiter grossièrement la pièce avant de l'installer sur le plateau de montage.</li> <li>(f) Ne pas monter une pièce fendue ou comportant un nœud.</li> <li>(g) Utiliser la vitesse la plus lente au démarrage d'une nouvelle pièce.</li> </ol> |
|---|---|
1. CONSERVEZ TOUS LES DISPOSITIFS DE PROTECTION EN PLACE et en bon état de fonctionnement.
  2. ENLEVEZ LES CLÉS ET OUTILS. Prenez l'habitude de vérifier si les clés et autres outils ne sont pas trop près de la machine avant de la démarrer.
  3. CONSERVEZ LA SURFACE DE TRAVAIL PROPRE ET LIBRE D'ENTRAVES. Les endroits encombrés augmentent le risque d'accident.
  4. NE PAS UTILISER DANS LES ENVIRONNEMENTS DANGEREUX. N'utilisez pas d'outils électriques dans les endroits humides, détrempés, ou sous la pluie. Conservez l'espace de travail bien éclairé.
  5. TENEZ LES ENFANTS À L'ÉCART. Tous les visiteurs doivent être tenus à une distance sécuritaire de l'aire de travail.
  6. RENDEZ L'ATELIER À L'ÉPREUVE DES ENFANTS avec des verrous, des interrupteurs principaux ou en enlevant les clés de démarrage sur les outils.
  7. NE FORCEZ PAS L'OUTIL. L'outil effectuera un meilleur travail et de façon sécuritaire s'il est utilisé au rythme pour lequel il a été conçu.
  8. UTILISEZ L'OUTIL APPROPRIÉ. Ne forcez pas un outil ou un accessoire pour effectuer un travail pour lequel il n'a pas été conçu.
  9. UTILISEZ UNE RALLONGE ÉLECTRIQUE APPROPRIÉE. Assurez-vous que votre rallonge électrique est en bon état et que le calibre du filage soit adéquat pour transporter le courant que la machine a besoin. Une rallonge de trop faible calibre induira une perte d'intensité du voltage, ce qui provoquera une surchauffe et une perte de puissance. Le tableau A indique le bon calibre à utiliser en fonction de la longueur de la rallonge et de la demande en intensité du moteur. En cas de doute, utilisez la rallonge de calibre plus fort. Plus le numéro est petit, plus la rallonge est de fort calibre.
  10. PORTEZ DES VÊTEMENTS APPROPRIÉS. Ne portez pas de vêtements amples, des gants, des colliers, des bracelets, ou tout autre bijou ou accessoire qui pourrait être entraîné par des pièces mobiles. Des souliers à semelle antidérapante sont également recommandés. Attachez les cheveux longs et portez un bonnet pour contenir la chevelure trop abondante.
  11. PORTEZ DES LUNETTES DE PROTECTION. Portez également un masque contre la poussière si le travail exécuté dégage de la poussière. Veuillez prendre note que les lunettes de prescription ordinaire ne résistent pas aux impacts et qu'elles ne sont pas homologuées à titre de lunettes de sécurité.
  12. IMMOBILISEZ VOTRE TRAVAIL. Utilisez des serres ou un étau pour immobiliser votre travail lorsque c'est possible. C'est plus sécuritaire que d'utiliser votre main, et ça permet de libérer vos deux mains pour opérer l'outil confortablement.
  13. NE VOUS ÉTIREZ PAS AU-DESSUS DE LA MACHINE. Demeurez solidement en équilibre sur vos pieds en tout temps.
  14. ENTRETENEZ LES OUTILS AVEC SOIN. Gardez les outils de coupe tranchants et propres pour en tirer les meilleures performances. Suivez les instructions du fabricant pour la lubrification et l'entretien des accessoires.
  15. DÉBRANCHEZ LES OUTILS avant d'en effectuer l'entretien ou lors du changement d'accessoires tels que lames ou couteaux.
  16. RÉDUISEZ LES RISQUES DE DÉMARRAGE NON INTENTIONNEL. Assurez-vous que l'interrupteur est en position fermée avant le branchement d'un outil.
  17. UTILISEZ LES ACCESSOIRES RECOMMANDÉS. Consultez le manuel d'instruction pour connaître les accessoires recommandés. L'utilisation d'accessoires inappropriés pose des risques de blessures aux utilisateurs.
  18. NE VOUS TENEZ JAMAIS DEBOUT SUR UNE MACHINE. Des blessures graves pourraient survenir si la machine bascule ou si les outils coupants sont touchés accidentellement.



19. VÉRIFIEZ LES PIÈCES ENDOMMAGÉES. Avant de poursuivre l'utilisation d'un outil, tout dispositif de protection ou toute pièce endommagée devra être inspecté pour déterminer si elle peut fonctionner correctement et selon l'utilisation qui en est prévue. Vérifiez l'alignement des pièces mobiles à savoir s'il y a blocage, un bris, ou toute autre condition qui nuirait à son utilisation. Une pièce ou un protecteur endommagé doit être réparé ou remplacé.
20. SENS D'ALIMENTATION. Alimentez la pièce vers la lame ou le couteau dans le sens contraire de sa rotation seulement.
21. NE LAISSEZ JAMAIS UN OUTIL FONCTIONNER DANS SURVEILLANCE – ÉTEIGNEZ L'OUTIL. Ne laissez pas l'outil sans surveillance jusqu'à ce qu'il s'arrête complètement.

Table A						
Ampérage		Voltage	Longueur totale de la rallonge en pieds			
		120	25	50	100	150
		240	50	100	200	300
Plus de	Pas plus de		Calibre minimal pour la rallonge			
0	6		18	16	16	14
6	10		18	16	14	12
10	12		16	16	14	12
12	16		14	12	Non recommandé	

## Instructions de mise à la terre

1. Tous les outils électriques avec mise à la terre :

Dans l'éventualité d'une défectuosité ou d'un bris, la mise à la terre procure un chemin de moindre résistance au courant électrique afin de réduire les risques de décharges électriques. Cette machine est équipée d'un fil électrique muni d'un fil conducteur relié à la masse de la machine et d'une fiche dotée d'une mise à la terre. La fiche doit être branchée dans une prise de courant installée correctement et conformément aux codes et règlements locaux.

Ne modifiez pas la fiche fournie avec la machine. Si elle n'est pas compatible avec la prise de courant, contactez un électricien qualifié pour remplacer la prise de courant.


Un branchement incorrect de la mise à la terre de la machine peut résulter en des risques de décharges électriques. Le fil conducteur gainé de couleur verte (ou verte striée de jaune), est le fil de mise à la terre de la machine. Si une réparation ou un remplacement du fil électrique ou de la prise est nécessaire, ne branchez pas la mise à la terre sur une prise active.

Vérifiez auprès d'un électricien certifié ou le personnel de service si les instructions de mise à la terre ne sont pas comprises, ou si vous avez des doutes à savoir si la machine est mise à la terre correctement. Utilisez seulement des rallonges électriques munies de 3 fils, et de fiches et de prises comportant une mise à la terre. Remplacez ou réparez une rallonge électrique endommagée ou usée.

2. Outils électriques avec mise à la terre utilisés sur un circuit électrique d'un voltage compris entre 150 et 250 volts :

Cet outil est conçu pour être utilisé avec une prise et une fiche telle que montrée dans l'illustration ci-dessous. Assurez-vous que l'outil est branché dans une prise compatible avec la fiche. Aucun adaptateur n'est disponible, ou ne devrait être utilisé avec cet outil. Si l'outil doit être connecté sur un type différent de circuit, ou rebranché ailleurs, les modifications doivent être exécutées par du personnel qualifié; et après le branchement, l'outil doit être conforme aux codes et règlements en vigueur.

### Méthode de mise à la terre

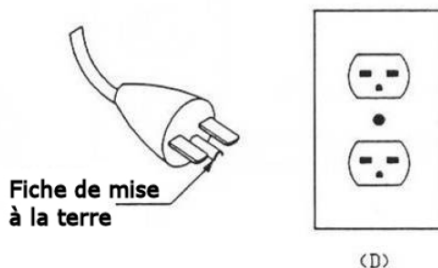


## Locking the lathe

It is strongly recommended that the lathe is never left unattended in the unlocked condition. To lock the machine it is recommended that a cover (not supplied) is made to lock the control panel. We have supplied two concepts for locking the panel (see below). The cover can be made from wood or plastic, two covers (not supplied) are made to lock the control panels on both headstock and remote controller. We have supplied four concepts for locking the control panel (see below).

First, push down the emergency stop. Then lock the cover together by putting padlocks [not included] on the two handles on the control panel. To safeguard your machine from unauthorized operation and accidental starting by young children, the use of padlocks is strongly recommended.




**Wooden safety cover  
Padlocks**

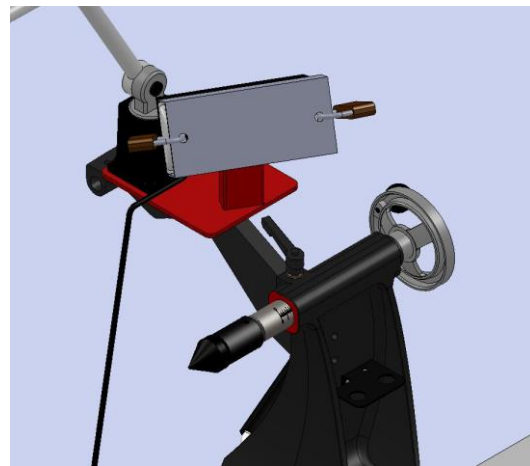

**Wooden safety cover  
Padlocks**



**Plastic safety cover  
Padlocks**

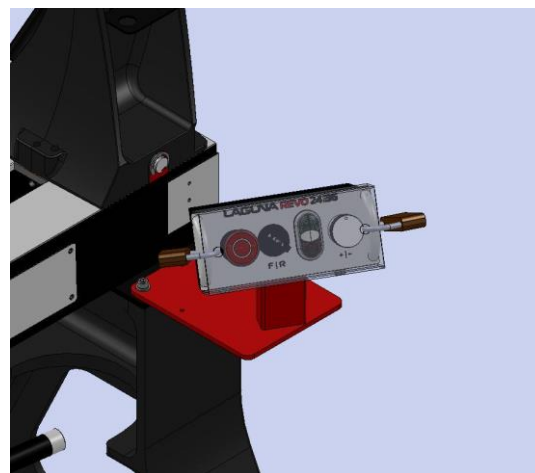

**Plastic safety cover  
Padlocks**



## Limited Warranty.

New woodworking machines sold by Laguna Tools carry a one-year warranty from the date of shipping. Laguna Tools guarantees all new machines sold to be free of manufacturer's defective workmanship, parts, and materials.

We will repair or replace, without charge, any parts determined by Laguna Tools, Inc. to be a manufacturer's defect. We require the defective item/part to be returned to Laguna Tools. In the event the item/part is determined to be

damaged due to lack of maintenance, cleaning or misuse/abuse, the customer will be responsible for the cost to replace the item/part, plus all related shipping charges.

This limited warranty does not apply to natural disasters, acts of terrorism, normal wear and tear, product failure due to lack of maintenance or cleaning, damage caused by accident, neglect, lack of or inadequate dust collection, misuse/abuse or damage caused when repair or alterations have been made or attempted by others.

Laguna Tools, Inc. is not responsible for additional tools or modifications sold or performed (other than from/by Laguna Tools, Inc.) on any Laguna Tools, Inc. woodworking machine.

Warranty may be voided upon the addition of such noted tools and/or modifications, determined on a case-by-case basis.

Normal user alignment, adjustment, tuning and machine settings are not covered by this warranty. It is the responsibility of the user to understand basic woodworking machinery settings and procedures and to properly maintain the equipment in accordance with the standards provided by the manufacturer.

Parts, under warranty, are shipped at Laguna Tools, Inc's cost either by common carrier, FedEx Ground service or a similar method.

Technical support to install replacement parts is primarily provided by phone, fax, or e-mail.

The labor required to install replacement parts is the responsibility of the user.

Laguna Tools is not responsible for damage or loss caused by a freight company or other circumstances not in our control.

Only new machines sold to the original owner are covered by this warranty.

For warranty repair information, call 1-800-332-4094.

## **Noise Emission.**

Notes concerning noise emission:

Given that there exists a relationship between noise level and exposure times, it is not possible to precisely determine the need for supplementary precautions. The factors affecting the true level of exposure to operators are clearly the amount of time exposed and the characteristics of the working environment, such as other sources of dust and noise, etc., for example, adjacent machines - in other words, the level of ambient noise. It is possible that exposure level limits will vary from country to country.

## Specification sheet.

<b>Motor</b>	<b>Induction, 1725RPM, 3 HP 220V</b>
<b>Voltage</b>	<b>220v 60hz single phase input, 3 phase output</b>
<b>Recommended breaker size</b>	<b>15 amp</b>
<b>Swing over bed</b>	<b>24" (609mm)</b>
<b>Swing over banjo</b>	<b>19.75" (501mm)</b>
<b>Outboard swing max</b>	<b>38" (965mm)</b>
<b>Distance between centers</b>	<b>36" (914mm)</b>
<b>Floor to spindle center</b>	<b>44.5" (1130mm)</b>
<b>Floor to bed height</b>	<b>32.5" with pads (826mm)</b>
<b>Floor space</b>	<b>W60" D26" H52.25" (1524mm, 660mm, 1327mm)</b>
<b>Tool rest</b>	<b>12" (305mm)</b>
<b>Speed range high</b>	<b>135 - 3500 RPM</b>
<b>Speed range low</b>	<b>50 - 1300 RPM</b>
<b>VFD</b>	<b>DeltaS1 variable frequency drive</b>
<b>Drive belt</b>	<b>Poly-groove drive belt with easy access</b>
<b>Spindle</b>	<b>1.25" x 8 tpi right hand thread</b>
<b>Spindle taper</b>	<b>MT 2</b>
<b>Spindle lock</b>	<b>Spring loaded</b>
<b>Spindle index</b>	<b>14 / 36 / 48 positions with lock</b>
<b>Headstock &amp; tailstock bore</b>	<b>0.375" dia (9.5mm dia)</b>
<b>Tail stock travel</b>	<b>4.5" (114mm)</b>
<b>Tail stock removal</b>	<b>Self- ejecting</b>
<b>Tailstock tapers</b>	<b>MT 2</b>
<b>Face plate</b>	<b>3" diameter (76mm)</b>
<b>Bed material</b>	<b>Steel</b>
<b>Weight (Net / ship)</b>	<b>532/560 lbs (242kg / 255 kg)</b>

## Receiving your machine.

**Note.** It is probable that your machine will be delivered by a third party. Before you unpack your new machine you will need to first inspect the packing, invoice and shipping documents supplied by the driver.

Insure that there is no visible damage to the packing or the machine. You need to do this prior to the driver leaving. All damage must be noted on the delivery documents and signed by you and the delivery driver. You must then contact the seller (Laguna Tools) as soon as practical. If damage is found after delivery, contact the seller as soon as is practical.


**Note.** It is probable that you will find sawdust within your machine. This is because the machine has been tested prior to shipment from the factory and or Laguna Tools. Laguna Tools endeavours to test machines prior to shipping to customers. As movement can take place during transportation it must be noted that additional machine movement can take place between Laguna Tools and the end user and some adjustments may have to be undertaken by the customer. These adjustments are covered in the various sections of this manual.

## Introduction to lathes.

This machine is designed to give you years of safe service. Read this owner's manual in its entirety before assembly or use.

## Parts of the lathe.

The lathe consists of a number of major parts, which are discussed in this manual. Take the time to read this section and become familiar with the machine.

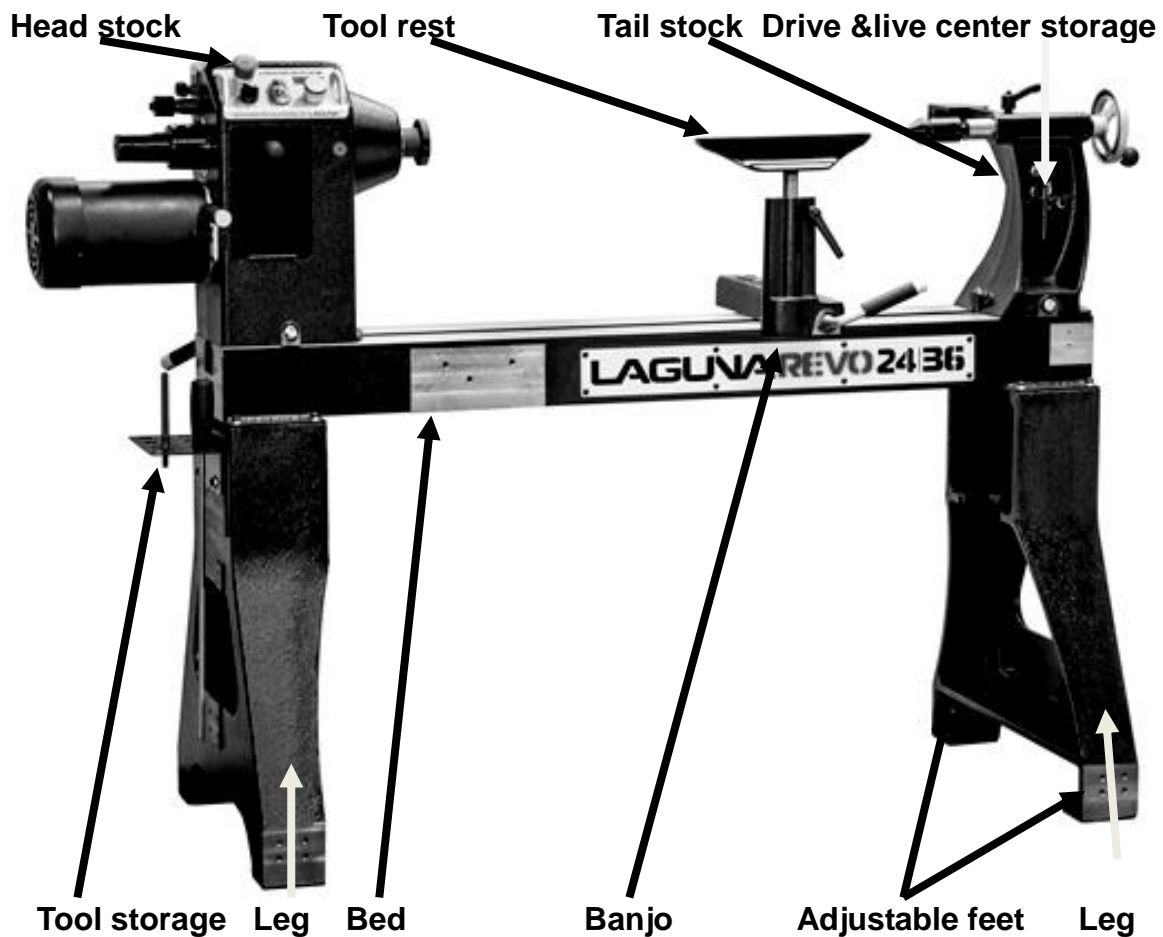

## Identification.

There is a plate at the back of the machine listing all the manufacturing data, including the serial number, model, etc.

<b>LAGUNA</b> 	
<b>Laguna REVO 24 36 Lathe</b>	
Model	MLAREVO 2436
Motor	3 HP, 230V
Power Requirements	230V, 1Ph
Serial No.	
Taiwan TCP	

## Lathe Bed.

The bed is a machined heavy steel welded construction.



Underside of lathe bed



### **Lathe legs.**

The Legs are cast iron, and their heavy construction gives the machine a low center of gravity and ensures that it is very stable. The legs are supplied with adjustable feet to allow the machine to be leveled.



**Legs with adjustable feet assembled**

### **Head stock.**

The head stock is cast iron and houses the variable speed control and motor. The Spindle can be locked in 14 / 36 and 48 positions.



**Headstock removed from the bed**



**Head or remote selection switch**

### **Tail stock.**

The tail stock is of cast iron construction, and the spindle has a travel of 4 1/2 in. It can accommodate centers and other tools which have a number 2 Morse Taper. The tail stock can be moved to any position on the lathe bed and locked to suit the job at hand.



**Tailstock viewed from the back**



**Tailstock viewed from the front**

### **Tool rest.**

The tool rest can be moved to any position on the lathe bed and locked to suit the job at hand. The tool rest has a tall profile to allow the bowl turner to turn steep angles. The leading edge is made from 6mm hardened steel.



**Tool rest assembled to the bed**



**Tool rest**

## Electrical system.

**220V:** The electrical control system (VFD) is housed at the back of the head stock, The VFD converts single phase 220v to three phase. There is a speed readout at the front of the lathe with controls to fine adjust the RPM of the spindle. . A power cord with 220V plug is provided. There are two electrical sockets to the side of the VFD..



**VFD with cover open**



**Power sockets**


## **Tool storage.**

A tool storage bracket which can be mounted on either leg.





**Tool storage bracket**

## **What you will receive with the lathe.**

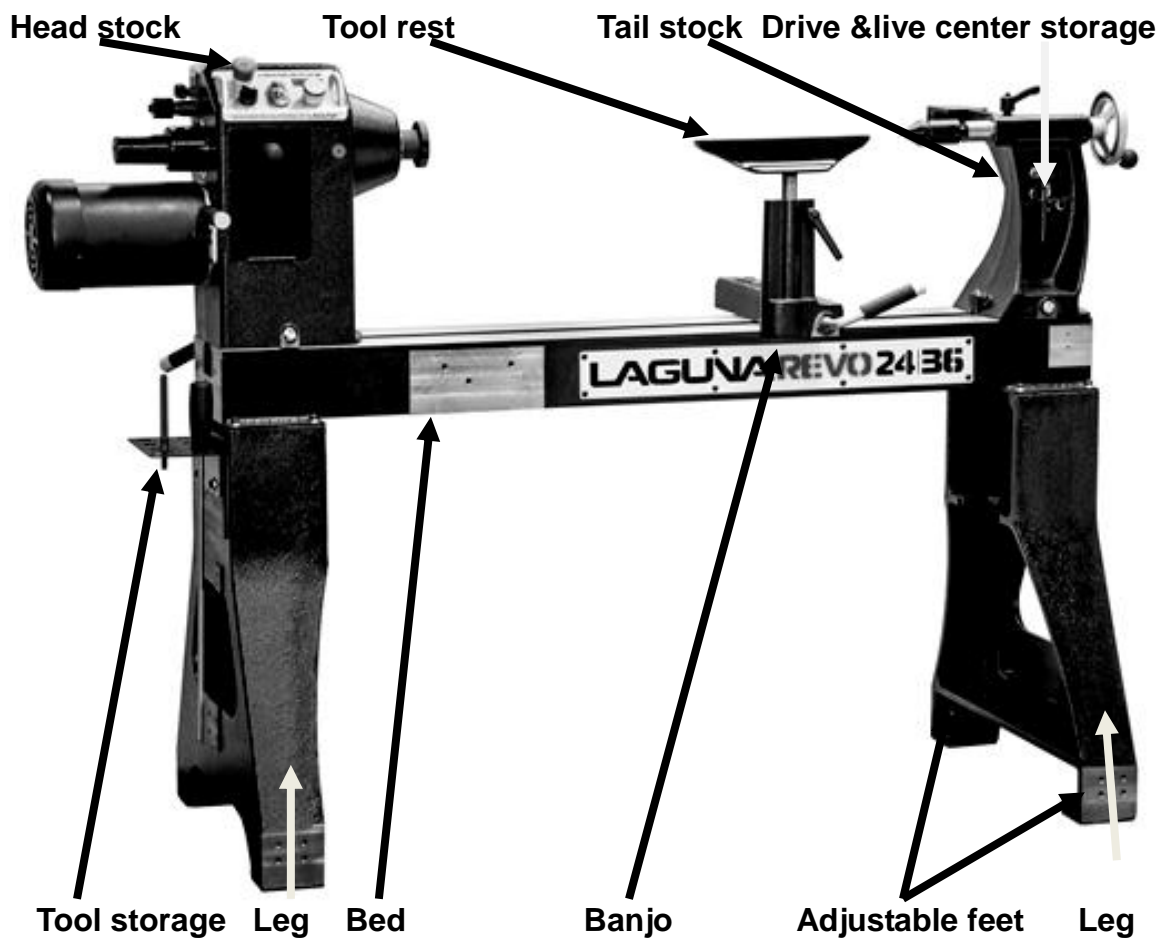

Remote controller

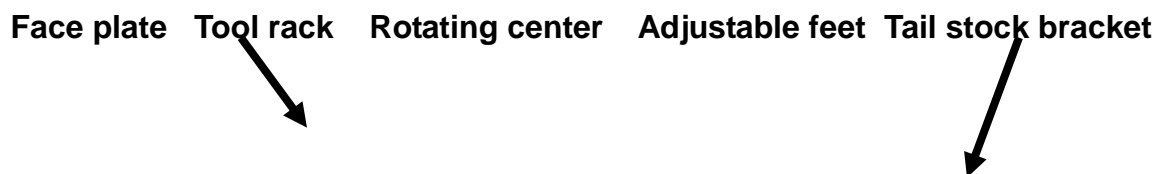

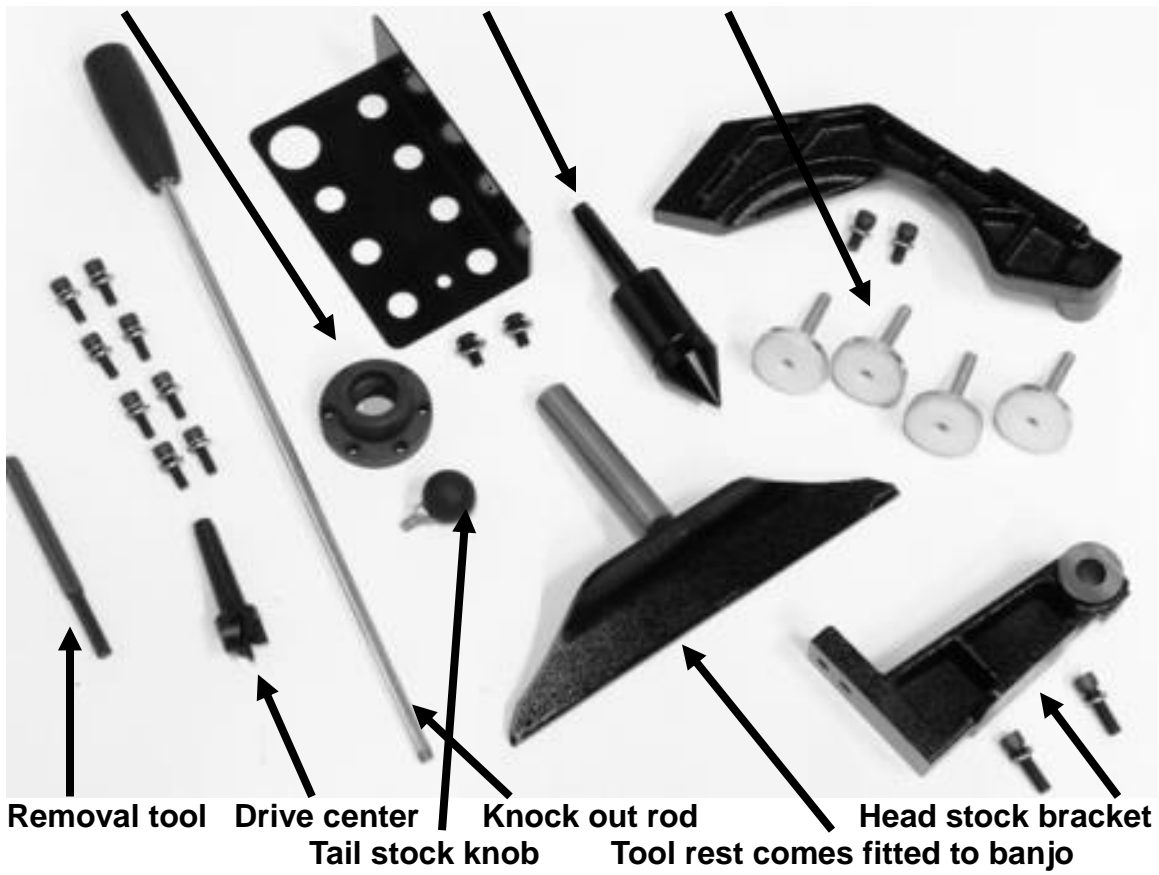

Remote brackets and hardware



## Where to locate your machine.

Before you remove your machine from the packaging, select the area where you will use your machine. There are no hard and fast rules for its location, but below are a few guidelines:

1. There should be sufficient area at the front of the machine to allow you to work on it comfortably.
2. There should be sufficient area at the back of the machine to allow access for adjustments and maintenance to be conducted.
3. Adequate lighting. The better the lighting the more accurately and safely you will be able to work.
4. Solid floor. You should select a solid flat floor, preferably one made of concrete or something similar.
5. Locate it close to a power source and dust collection.
6. Allow an area for the storage of blanks, finished products and tools.


## Unpacking your machine.

To unpack your machine you will need tin snips, a knife, and a wrench.

1. Using the tin snips, cut the banding that is securing the packing box (If fitted). **WARNING: EXTREME CAUTION MUST BE USED, BECAUSE THE BANDING WILL SPRING AND COULD CAUSE INJURY.**



Lathe in packaging

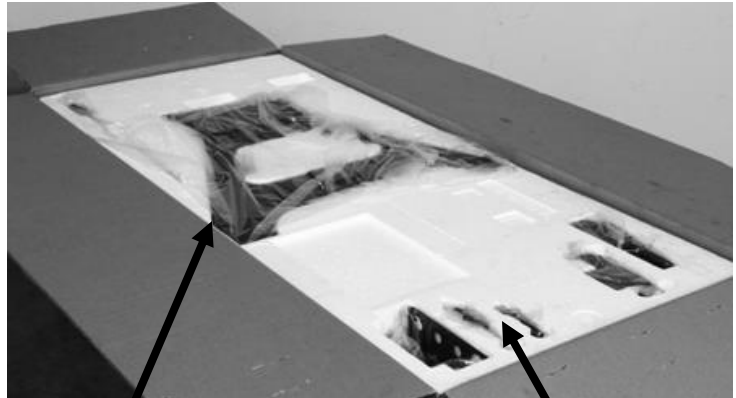

Leg

Parts of the lathe

**Second leg**



**Top packaging removed**

2. Open the box and remove the parts sent with the lathe including the first leg.

**Note.** The legs are heavy and caution must be exercised. They are cast iron and if dropped they will break.

3. Remove the top packaging and remove the second leg.

4. Remove the lathe bed. It is recommended that it be lifted with a hoist or forklift using a "sling" as it is very heavy.

**Note.** The machine is heavy. Ensure that you have enough people to do the job safely.

**Note.** If you have any doubt about the described procedure, seek professional assistance. Do not attempt any procedure that you feel is unsafe, or that you do not have the physical capability of achieving.



5. Lower the bed of the lathe onto 2 stacks of wood. This will allow access to the underside of the bed.

## Assembly and setup.

The machine comes mostly assembled. You will have to assemble the legs, headstock, tailstock, tool storage and the tool rest to the bed of the machine.


**Note.** It is recommended that the head stock, tool rest and tailstock be removed from the bed of the lathe to ease assembly (Covered later in the manual).

## Assembling the legs to the bed of the lathe.

There is a stop at both ends of the bed. The stop is a safety feature that makes it impossible for the headstock or tailstock to slide off the end of the bed.

Remove the stops and loosen the clamps on both the head stock, tool rest and tailstock. Slide them off the bed. This will greatly reduce the weight of the bed and allow easier assembly.


**Note:** The headstock and tailstock are very heavy and extreme caution must be exercised when removing them from the bed of the lathe. Take care not to cause damage during removal.

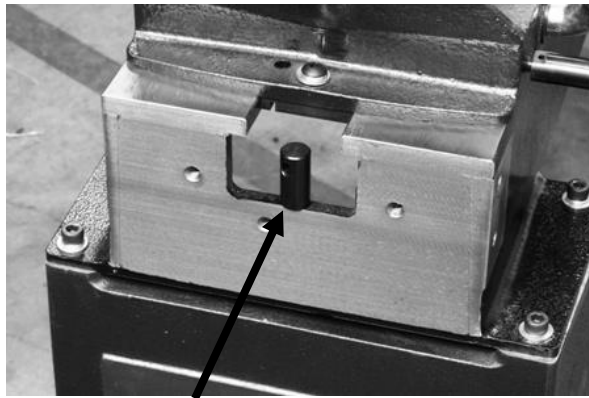


Stop



Tailstock clamp handle

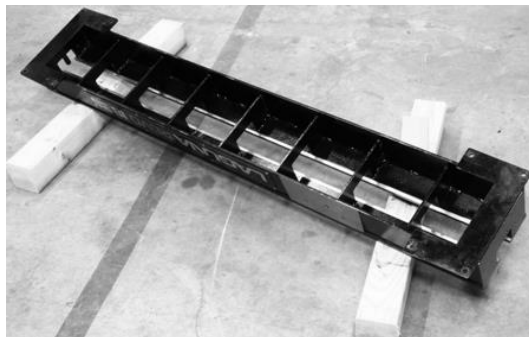

Bed with headstock and tailstock removed

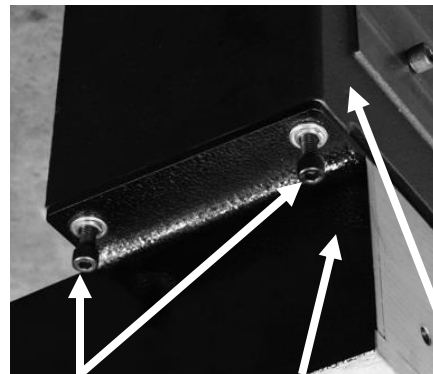

Leg fixing screws

Bed

Leg


Lay the bed on 2" X 4" timbers in the upside down position. Lift the legs to the vertical position and lower them onto the bed. Secure with the fixing screws provided.

**Note.** At least two people will be needed to perform the assembly, one to hold the leg in position and one to fit the fixing screws.

**Note.** If you have any doubt about the described procedure, seek professional assistance. Do not attempt any procedure that you feel is unsafe, or that you do not have the physical capability of achieving.

Fit the 4 leveling feet to the lathe legs with the lock nut on the underside of the leg.

Once both legs have been fitted turn the assembly up to the correct position.

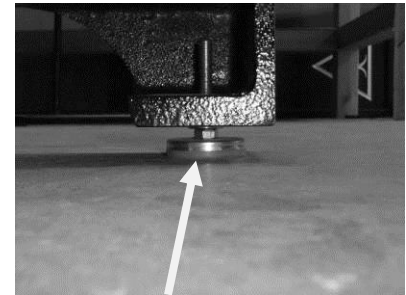

**Leveling foot**



Assemble the head stock, tool rest and tailstock back onto the bed of the lathe and **fit the stops.**

**Note.** If you have any doubt about the described procedure, seek professional assistance. Do not attempt any procedure that you feel is unsafe, or that you do not have the physical capability of achieving.



### **Assembled lathe**


If you decide to fit the tool rest after fitting the tail stock, follow the below procedure.  
Fit the tool rest onto the bed of the lathe ensuring that the washer recess fits into the slot in the bed.

Fit the banjo onto the bed with the bolt through the washer and assemble the nut onto the thread.

Adjust the nut so that the clamp handle locks the banjo with approximately 30 degree of movement.



**Tool rest**

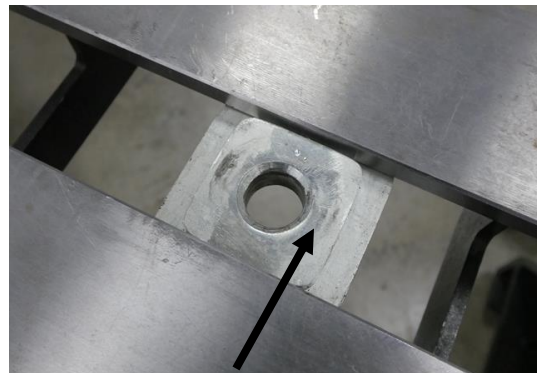

**Washer**



Washer assembled in position



Tool rest clamp handle

Banjo clamp handle

### Fitting the stock knob.

Screw the tail stock knob onto the tail stock handle.



Tail stock knob



Tail stock handle

### Connecting the electrical supply.

Ensure that the electrical supply corresponds with that of the machine (Single phase 220V).

It is recommended that you use a 15-amp main breaker.

**Note. A qualified electrician must carry out the installation.**



Electrical cable




## **Fitting the remote controller.**

The remote controller can be fitted in either of two positions, attached to the tail stock or attached to the tailstock leg.


### **Fitting the remote controller to the tailstock leg.**

1. Fit the support plate to the bed by removing the two clamp bolts and with the two clamp screws secure the support plate.
2. Fit the remote controller with the clamping supplied screws.
3. Ensure that the cable is clear of any obstruction.

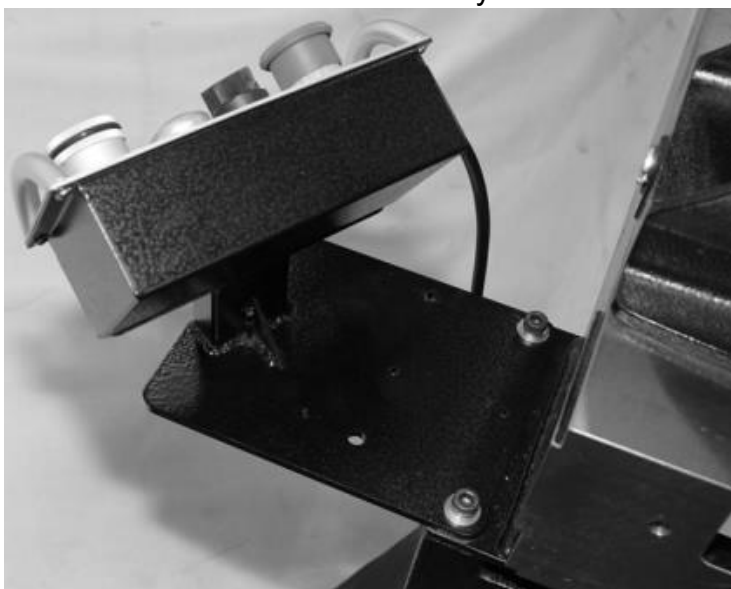

### **Fitting the remote controller to the tailstock.**

1. Fit the support plate to the tailstock bracket with the clamp screws supplied.
2. Fit the remote controller with the clamping supplied screws.
3. Ensure that the cable is clear of any obstruction.

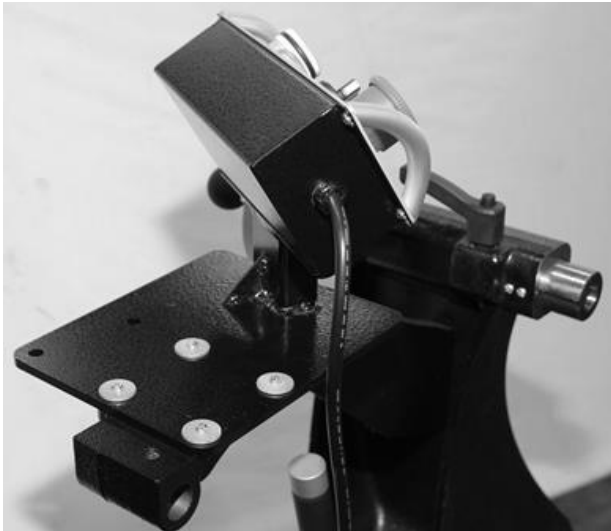

**Note.** The headstock can only be controlled by one controller and you must select which controller is used by selecting with the controller selection switch.



**Controller selection switch**

## Cleaning the machine.

Remove the rust protection grease with WD 40 or a similar solvent. It is important that you remove all the grease and re-lubricate with a Teflon-based lubricant. (Teflon has a lower tendency to attract sawdust and cause clogging).

## Fitting the rotating center.

Ensure that the bore of the tail stock is clean. The rotating center has a number 2 Morse Taper that fits into the tail stock.

Push the center into the tail stock bore firmly, and ensure that it is securely located. To remove the center, rotate the adjusting handle until it is as far back as possible and this will eject the center.

Rotating center



Adjusting handle

## Fitting the drive center into the head stock.

To remove the face plate from the head stock spindle, insert the removal tool into the hole in the face plate large diameter. Lock the spindle with the lathe spindle lock and unlock the face plate by rotating it. Take care not to drop the faceplate onto the bed of the lathe.

**Note. The face plate has a left-hand thread.**

Ensure that the bore of the head stock is clean. The drive center has a number No. 2 Morse Taper that fits into the head stock

Push the center into the head stock bore firmly, and ensure that it is securely located.

To remove the center, push the removal shaft into the back of the head stock, and give it a sharp knock. This will remove the drive center.

**Note.** Never leave the removal shaft in the head stock with the machine running.




Removal tool




Spindle lock


Face plate hole

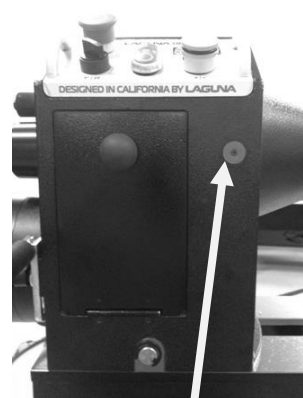

Lathe spindle lock

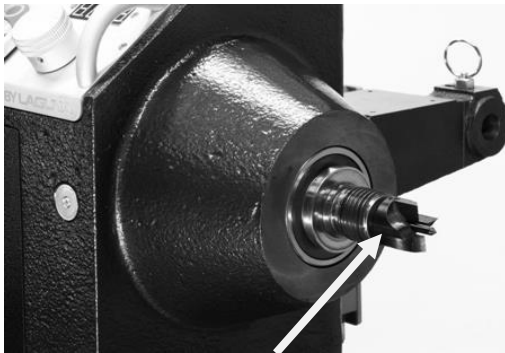

**Headstock drive center**

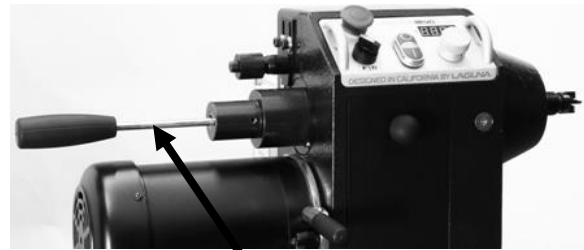

**Drive center removal shaft**

## **Fitting the face plate.**

Reverse the removal procedure, described earlier.

## **Lathe controls.**

### **Emergency stop button**

The emergency stop button will lock in the OFF position when fully depressed. To reset it, twist clockwise and it will pop out.

### **Forward / reverse switch.**

The forward / reverse switch selects the direction of the rotation of the spindle.

**The forward / reverse switch must only be used once the spindle has come to a complete stop.**

### **Start / Stop buttons.**

The start / stop buttons start the motor and the rotation of the spindle.

### **Speed display.**

The speed display shows the RPM of the spindle.

### **Variable speed adjustment knob.**

The Variable speed adjustment knob adjusts the spindle speed.



**Head stock clamp lever**

**Head stock clamp lever.**

The head stock clamp lever allows the head stock to be released and moved to any position on the lathe bed. It is located at the back of the head stock.

## Variable speed adjustment knob.



**Increase speed**

**Decrease speed**

The Variable speed adjustment knob adjusts the spindle speed. Turns clockwise to increase the speed, turns counter-clockwise to decrease the speed


## High / low speed.

The lathe has two sets of pulleys for high (135 - 3500 RPM) and low (50 - 1300 RPM) speed ranges.

Adjust between the speed ranges as follows.


1. Disconnect the electric supply to the lathe.
2. Open the pulley cover.
3. Loosen the motor lock handle and lift the motor to the highest position with the motor adjustment handle, then lock the motor lock handle.
4. Move the drive belt to the required set of pulleys.
5. Loosen the motor lock handle and with the motor adjustment handle tension the drive belt, then lock the motor lock handle.

The belt should be tensioned so that there is approximately 1/8 to 1/4 " deflection when the belt is pressed with moderate thumb pressure.

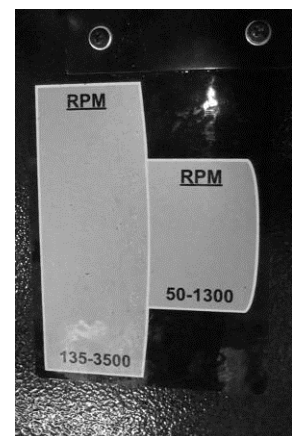


**Speed range**




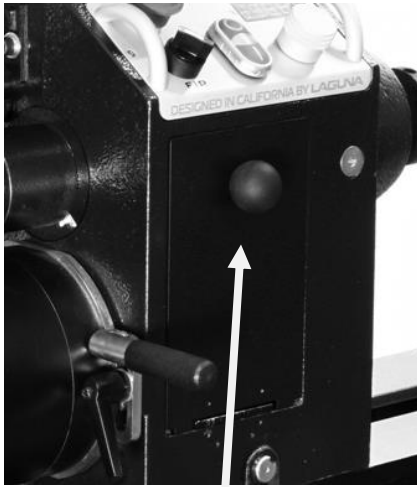

**Pulley cover**

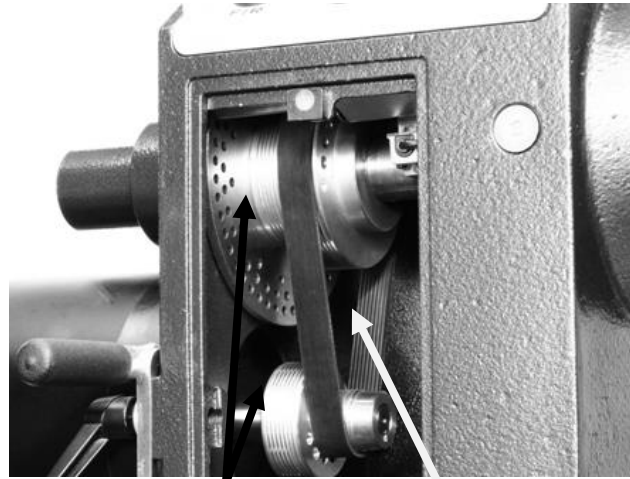

**Pulleys and drive belt**

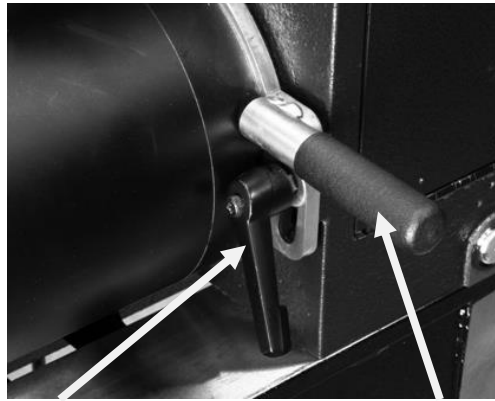

**Motor lock handle**

**Motor adjustment handle**


## **Indexing the spindle.**

The spindle has 3 sets of indexing holes 14 / 36 / 48. The selection plunger is located at the end of the head stock. To move between the 3 sets of holes, loosen the clamp knobs and slide the indexing plunger assembly to align with the selected hole set. Clamp in position with the clamp knobs. Try the plunger in a few different holes to check that it inserts and removes smoothly.

The indexing plunger is spring loaded and this is used only to temporarily align the plunger in the selected hole.


To fix the plunger in a selected hole, it must be attached to the housing by screwing into the clamped position.

There is a hole selection indicator that allows you to view which hole in a selected hole set has been selected.

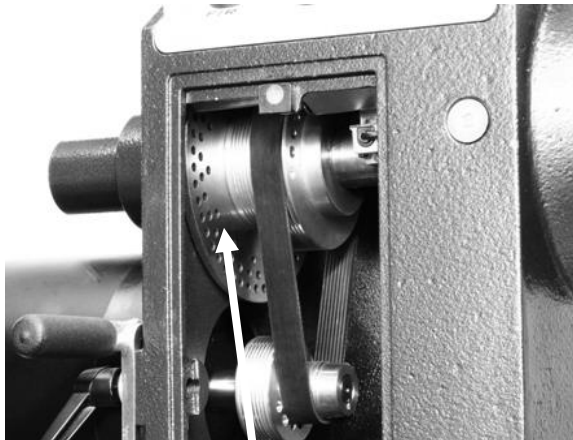


**Indexing holes**

**Clamping knobs**  
**Hole selection indicator**

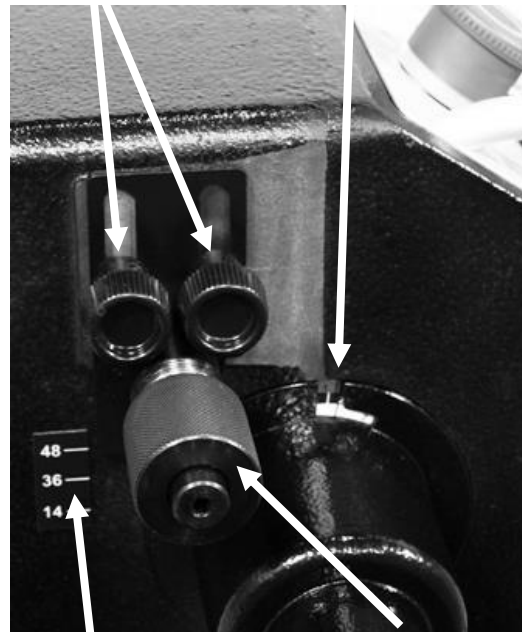


**Hole selection**

**Indexing plunger**

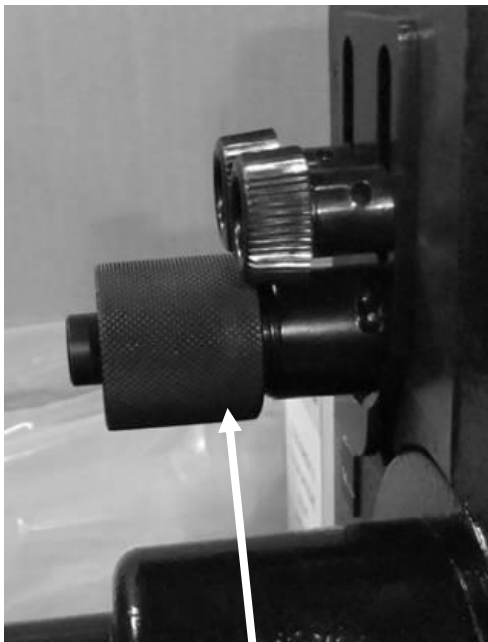

**Indexing plunger engaged**

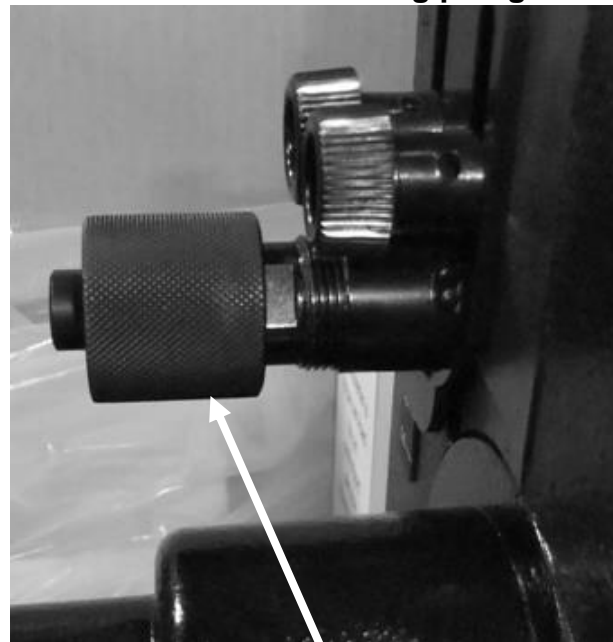

**Indexing plunger disengaged**

## Maintenance.

### General.

Keep your machine clean. At the end of each day, clean the machine. Wood contains moisture, and if sawdust or wood chips are not removed they will cause rust. In general, we recommend that you only use a Teflon-based lubricant on the lathe. Regular oil attracts dust and dirt. Teflon lubricant tends to dry and has less of a tendency to accumulate dirt and saw dust.

Periodically check that all nuts and bolts are tight.

### Drive belt.

The drive belt should last for many years (depending on the usage) but needs to be inspected regularly for cracks, cuts and general wear. If damage is found, replace the belt.

### Bearings.

All bearings are sealed for life and do not require any maintenance. If a bearing becomes faulty, replace it.


### Rust.

The lathe is made from steel and cast iron. All none-painted surfaces will rust if not protected. It is recommended that they be protected by applying wax or a Teflon-based lubricant to them.

### Center point alignment and slide clearance adjustment.

The center point alignment and slide clearance are adjusted at the factory and no adjustment should be required. Should movement or wear have taken place, the following adjustment procedure should be conducted.

**Note.** The slide clearance of the headstock and the tailstock must be checked and adjusted should it be needed prior to adjusting the center point alignment.

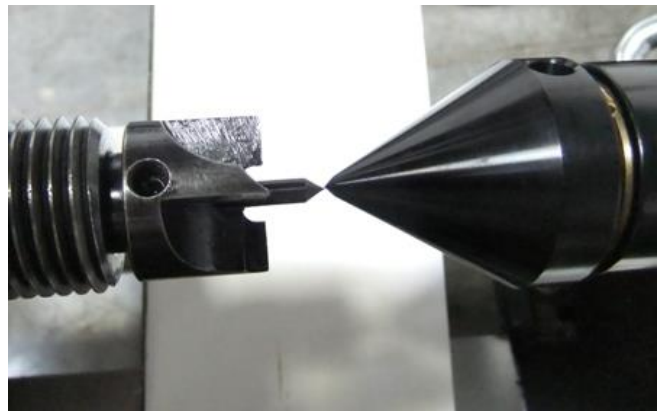

**Center points aligned**

### Slide adjustment.

Loosen the clamp handle on the tailstock and check for side movement. If it is excessive, Insert an Allen key into the adjusting screw and tighten.

**Note.** By rotating the adjustment screw, it moves into the adjusting slot which opens and removes the excessive clearance between the tailstock and the bed.

**Note.** Only make very small adjustments and then recheck the clearance. After adjustment

the tailstock should be slid along the bed to check for any area that it binds in the bed slot.

The same procedure as above should be conducted on the head stock should it be required.

**Note.** It is very unlikely that the headstock will require adjustment as it is not moved as often as the tailstock, so has less tendencies for ware.

**Adjustment slot**




**View under the tailstock**

**Adjustment slot**



**View under headstock**

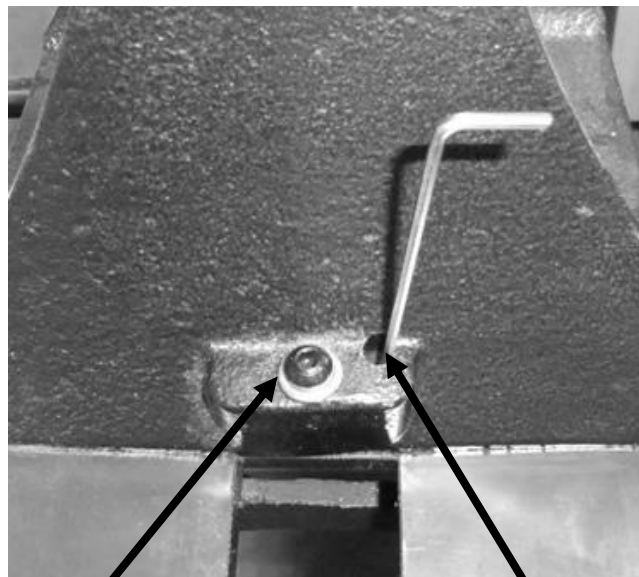

**Clamp screw**

**Adjusting screw**

### Center point alignment.

The tailstock has two clamp screws that are accessible from the top of the tailstock.


The clamp screws hold the slide plate to the tailstock casting. There is clearance in the holes that allows the tailstock to be moved in relation to the slide plate. The headstock also has two clamp screws, but one is accessible from under the headstock.

By loosening the clamp screws the headstock and tailstock can be moved and the center points aligned.

**Note.** It is recommended that the head stock be adjusted and not the tail stock. If the tail stock is not adjusted parallel to the bed slide, the center point will not be in alignment when the spindle is extended or retracted.

1. Loosen the clamp screw that is accessible from the top on the head stock.
2. Tap the side of the headstock with a rubber mallet close to the base in the direction requiring adjustment and retighten the clamp screw.
3. Recheck the center point alignment and repeat if required.

**Note.** Never hit any part of the lathe that is cast iron with a metal hammer or similar as it **will** break the casting.

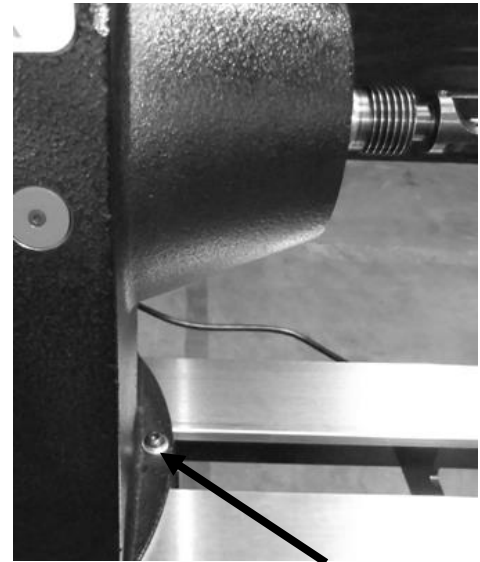

**Headstock clamp screw**

## Troubleshooting.

### **Lathe will not start.**

1. Check that the start switch is in the correct position.
2. Check that the electrical power cord is plugged into the power outlet.
3. Check that the electrical supply is on (reset the breaker).
4. With the power disconnected from the machine, check that the wiring to the plug is correct. Check that the rubber insulation is stripped enough and is not causing a bad connection. Check that all the screws are tight.
5. Emergency stop button engaged. Reset emergency stop button. Twist and it will pop out.

### **The machine will not stop.**

This is a very rare occurrence as the machine is designed to be fail-safe. If it should occur and you cannot fix the fault, seek professional assistance. The machine must be disconnected from the power and never run until the fault has been rectified.

1. The stop switch is faulty. Replace the stop switch.

### **Motor tries to start but will not turn.**

1. With the power disconnected from the machine, try to turn the spindle by hand. If the spindle will not turn, check the reason for jamming.
2. Capacitor faulty. Replace the capacitor.
3. Motor faulty. Replace the motor.
4. Power line overloaded. Correct overloaded condition.
5. Low voltage. Correct low voltage condition.

### **Motor overheats.**

The motor is designed to run hot, but should it overheat it has an internal thermal overload protector that will shut it down until the motor has cooled, and then it will reset automatically. If the motor overheats, wait until it has cooled and restart. If the motor shuts down consistently check for the reason. Typical reasons are dull cutting tools, the motor cooling fan being clogged or faulty, the motor cooling fins are clogged, overfeeding the job, and excessive ambient temperature.

### **Squeaking noise.**

1. Check that the motor cooling fan is not contacting the fan cover.
2. Check the bearings.
3. Check the drive belt is tensioned correctly.

### **Spindle slows down during a cut.**

1. Dull cutting tools. Replace the tool or have it re-sharpened.
2. Feeding the wood too fast. Slow down the feed rate.
3. Oil or dirt on the drive belt. Clean or replace the drive belt.
4. Drive belt loose. Re-tension drive belt.




**Machine vibrates.**


1. Machine not level on the floor. Re-level the machine ensuring that it has no movement.
2. Damaged drive belt. Replace the belt.
3. Job is not balanced. Change to slower speed and/ or balance the job.
4. Damaged pulley. Replace the pulley.
5. Worn spindle bearing. Replace the bearing.




Electrical drawing.

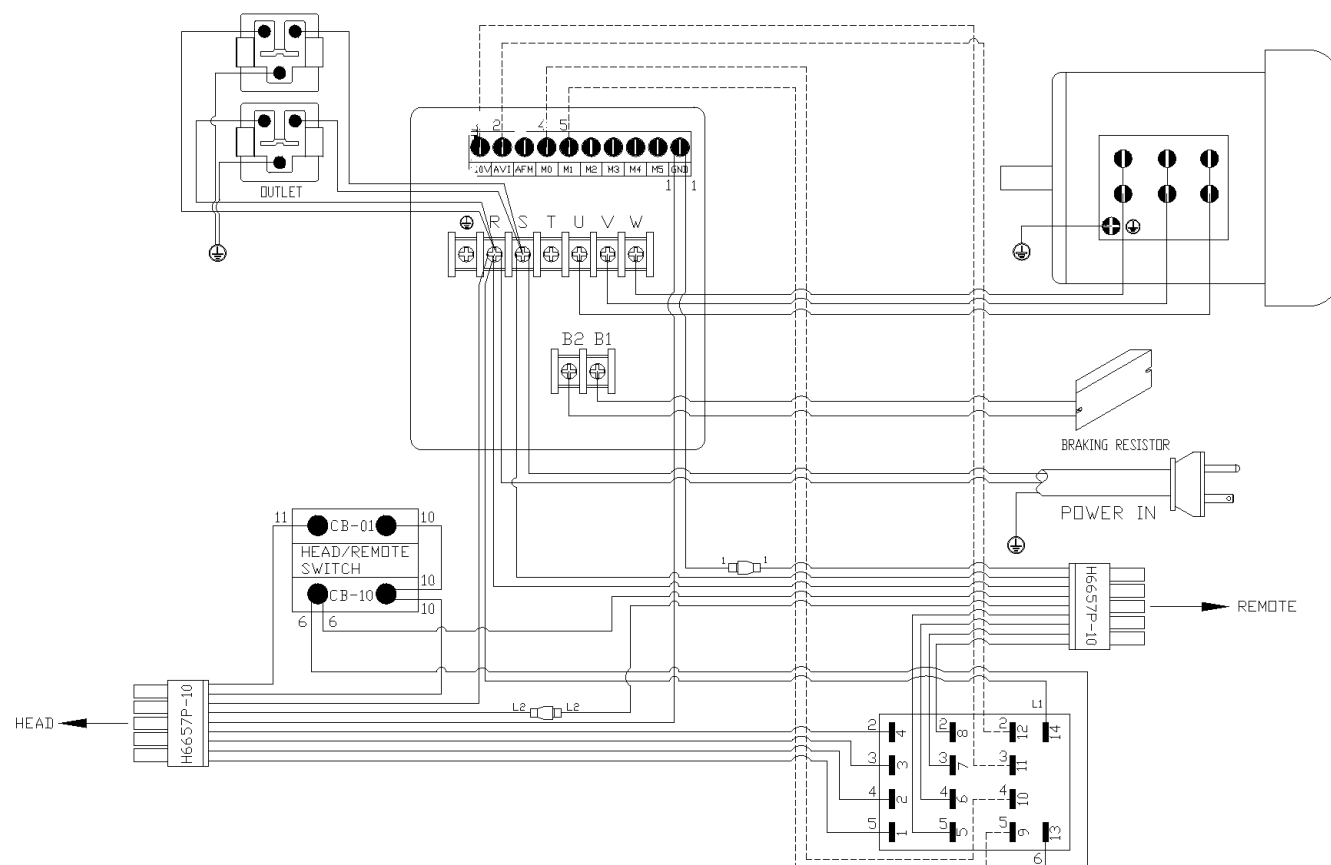


## Wiring diagram for control panel on headstock.

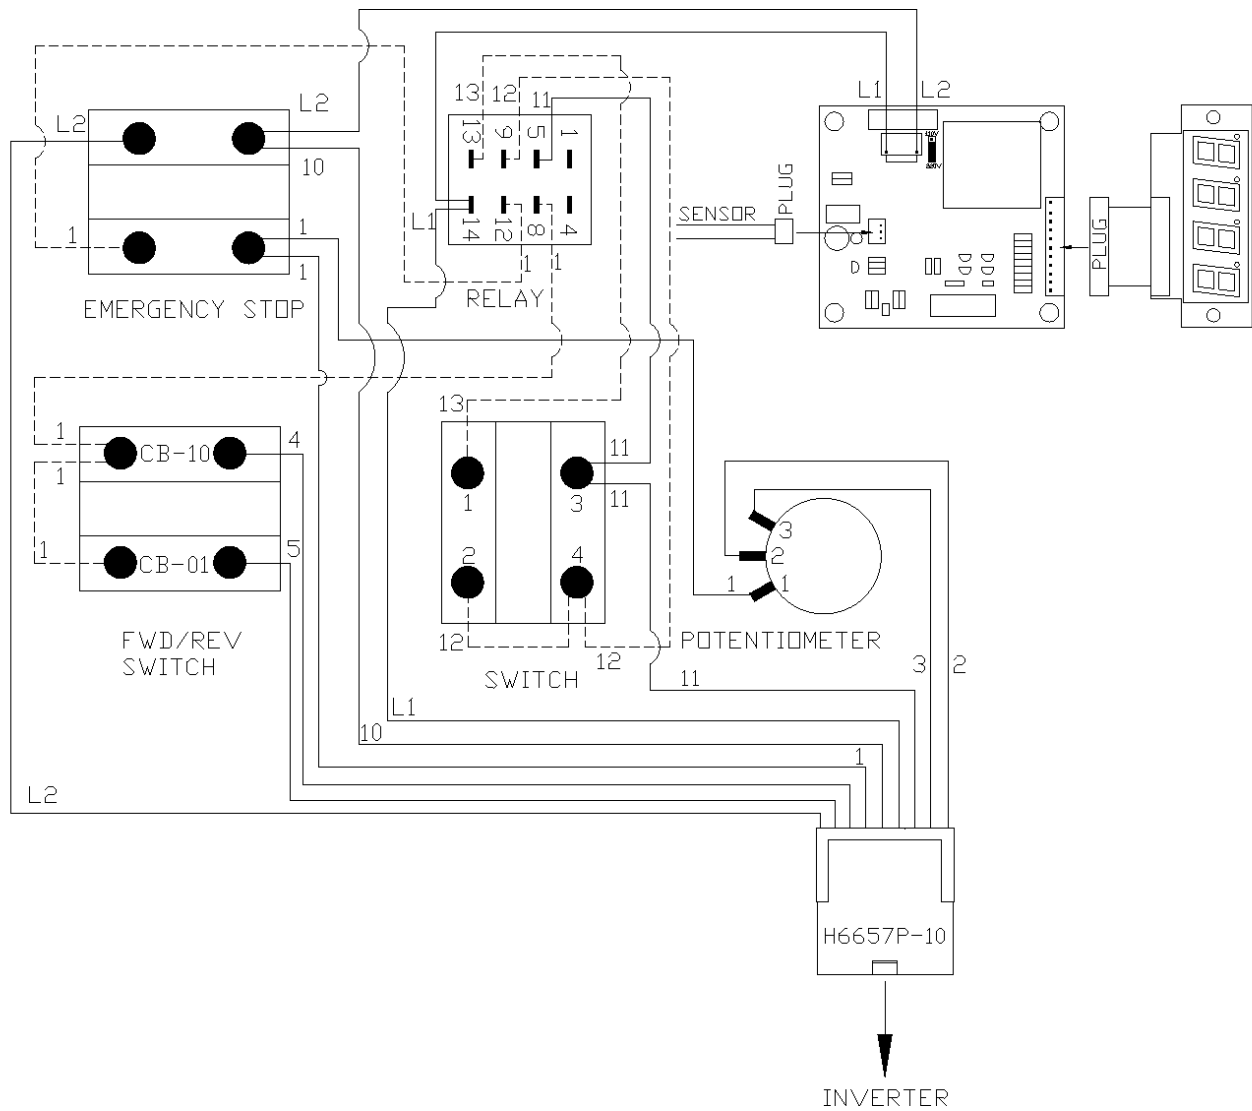


## Wiring diagram for remote control.

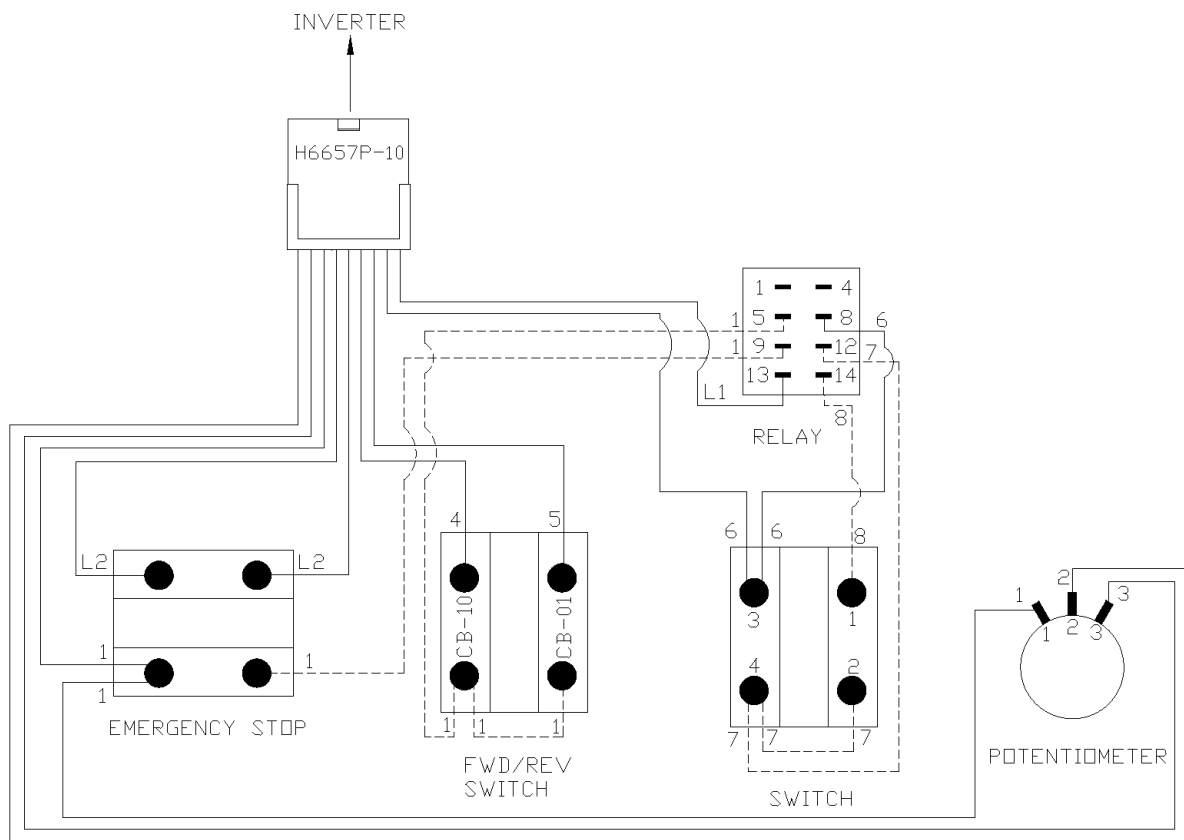

## Exploded view drawings and parts list.

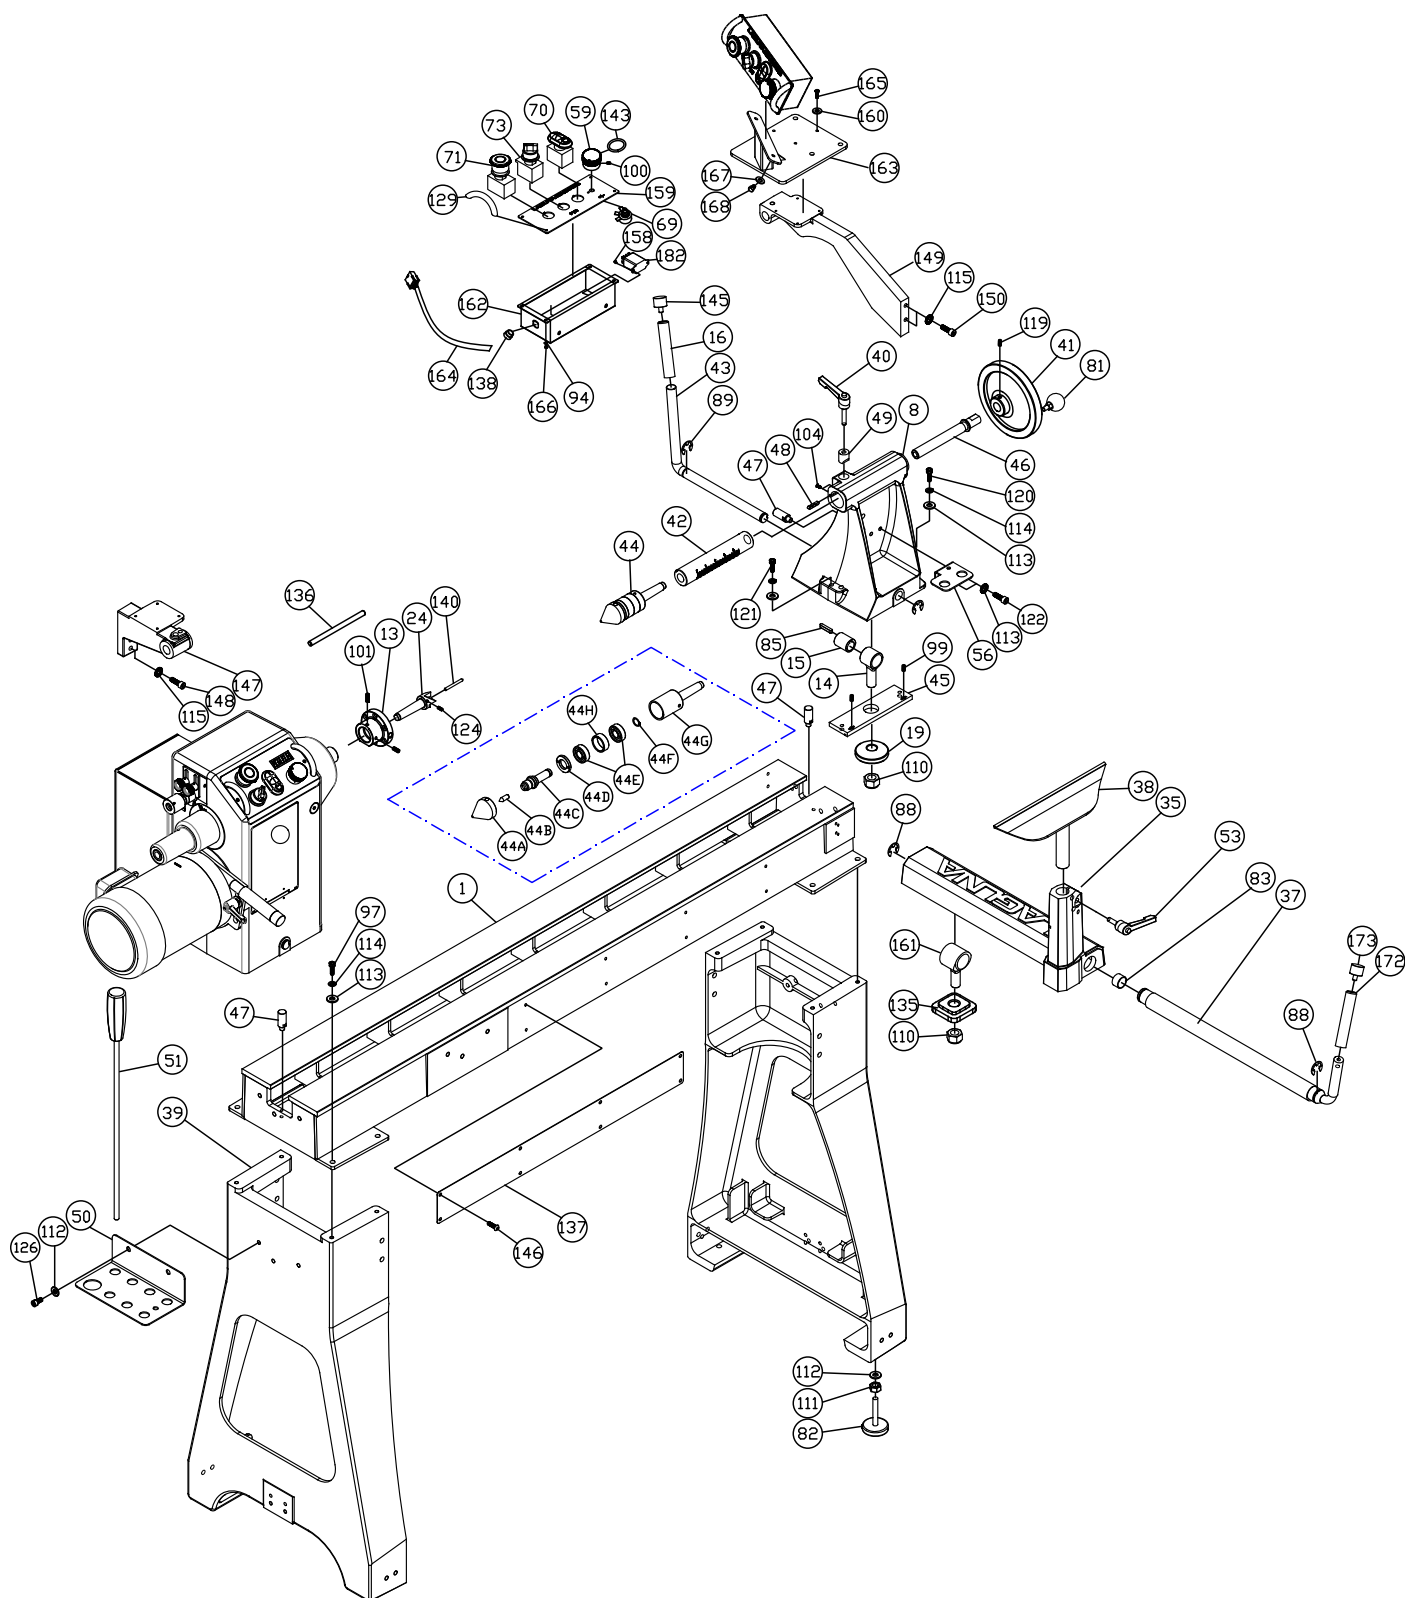

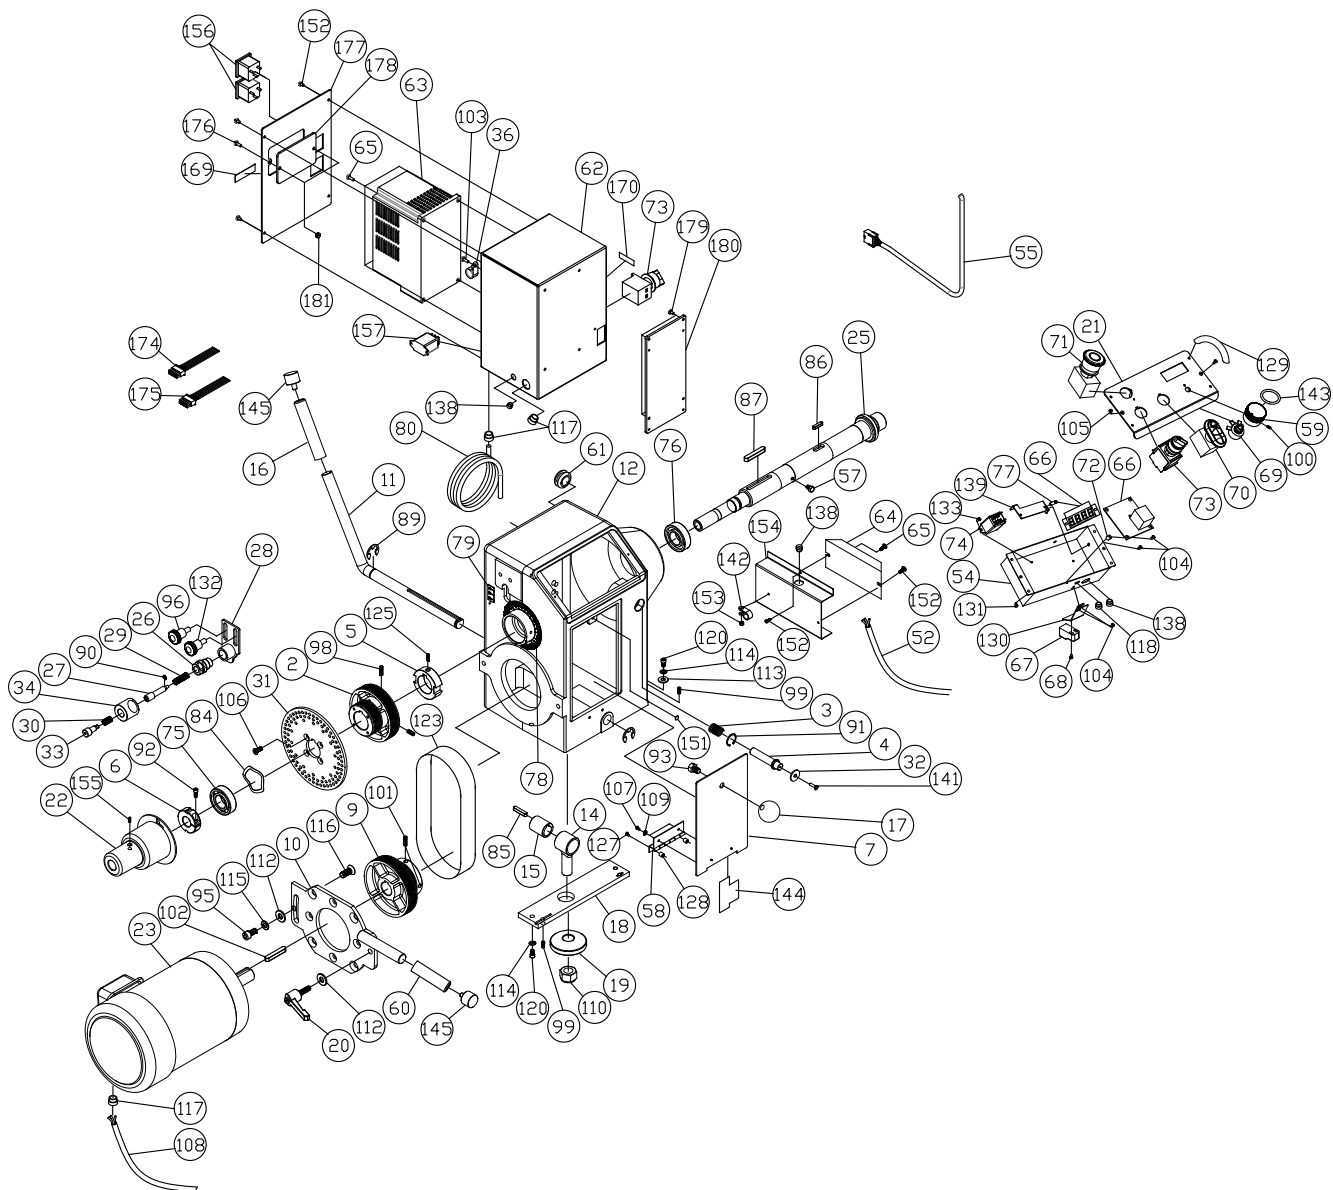

Parts List for REVO 24   36 Lathe				
Index	Part Number	Description	Specification	Qty
1	PLAREVO1836-101	Bed		1
2	PLAREVO1836-102	Spindle Pulley		1
3	PLAREVO1836-103	Spring		1
4	PLAREVO1836-104	Spindle Lock Plunger		1
5	PLAREVO1836-105	Locking Collar		1
6	PLAREVO1836-106	Bearing Nut		1
7	PLAREVO1836-107	Door		1
8	PLAREVO2436-220-108	Tailstock		1
9	PLAREVO1836-109	Motor Pulley		1

10	PLAREVO2436-220-110	Motor Plate		1
11	PLAREVO1836-111	Headstock Locking Handle		1
12	PLAREVO2436-220-112	Headstock		1
13	PLAREVO1836-113	3" Faceplate		1
14	PLAREVO1836-114	Clamp Bolt		2
15	PLAREVO1836-115	Sleeve		2
16	PLAREVO1836-116	Rubber Sleeve		2
17	PLAREVO1836-117	Knob		1
18	PLAREVO1836-118	Headstock Adjusting Plate		1
19	PLAREVO1836-119	Clamp		2
20	PLAREVO1836-120	Lock Handle		1
21	PLAREVO2436-220-121	Control Panel		1
22	PLAREVO1836-122	Handwheel		1
23	PLAREVO2436-220-123	Motor		1
24	PLAREVO1836-124	Spur Center		1
25	PLAREVO1836-125	Spindle		1
26	PLAREVO1836-126	Index Stud		1
27	PLAREVO1836-127	Index Shaft		1
28	PLAREVO1836-128	Index Bracket		1
29	PLAREVO1836-129	Spring		1
30	PLAREVO1836-130	Spring		1
31	PLAREVO1836-131	Index Plate		1
32	PLAREVO1836-132	Disc, Spindle Lock		1
33	PLAREVO1836-133	Index Bolt		1
34	PLAREVO1836-134	Index Knob		1
35	PLAREVO2436-220-135	Tool Rest Support Base		1
36	PLAREVO1836-136	Cord Holder		1
37	PLAREVO2436-220-137	Tool Rest Locking Handle		1
38	PLAREVO1836-138	12" Tool Rest		1
39	PLAREVO2436-220-139	Leg		2
40	PLAREVO1836-140	Lock Handle		1
41	PLAREVO1836-141	Handwheel		1
42	PLAREVO1836-142	Quill		1
43	PLAREVO1836-143	Tailstock Locking Handle		1
44	PLAREVO1836-144	Live Center Assembly		1
45	PLAREVO1836-145	Tailstock Adjusting Plate		1
46	PLAREVO1836-146	Lead Screw		1


47	PLAREVO1836-147	Stop Bolt		3
48	PLAREVO1836-148	Key		1
49	PLAREVO1836-149	Quill Lock Sleeve		1
50	PLAREVO1836-150	Tool Caddy		1
51	PLAREVO1836-151	Knockout Rod		1
52	PLAREVO1836-152	Braking Resistor Cord		1
53	PLAREVO1836-153	Lock Handle		1
54	PLAREVO1836-154	Control Box		1
55	PLAREVO2436-220-155	Control Cord		1
56	PLAREVO1836-156	Tailstock Tool Caddy		1
57	PLAREVO1836-157	Hex Cap Screw	M6x6	4
58	PLAREVO1836-158	Door Hinge		1
59	PLAREVO1836-159	Speed Knob		2
60	PLAREVO1836-160	Rubber Sleeve		2
61	PLAREVO1836-161	Rubber Bushing		1
62	PLAREVO2436-220-162	Bottom Cover		1
63	PLAREVO2436-220-163	Inverter		1
64	PLAREVO1836-164	Braking Resistor		1
65	PLAREVO1836-165	Screw	M4x12	5
66	PLAREVO1836-166	Digital Readout		1
67	PLAREVO1836-167	Digital Readout Sensor		1
68	PLAREVO1836-168	Screw	M3x20	2
69	PLAREVO1836-169	Control Pot Assembly		2
70	PLAREVO1836-170	ON/ OFF Switch		2
71	PLAREVO1836-171	Emergency Stop		2
72	PLAREVO1836-172	Spacer		2
73	PLAREVO1836-173	Fwd/Rev Switch		3
74	PLAREVO1836-174	Relay		1
75	PLAREVO1836-175	Ball Bearing	6205LLU	1
76	PLAREVO2436-220-176	Ball Bearing	6307LLU	1
77	PLAREVO1836-177	Pillar		2
78	PLAREVO1836-178	Index Label		1
79	PLAREVO1836-179	Index Indicator		1
80	PLAREVO1836-180	Power Cord		1
81	PLAREVO1836-181	Knob		1
82	PLAREVO1836-182	Leveling Foot		4
83	PLAREVO1836-183	Bushing		1




84	PLAREVO1836-184	Wave Washer	6205	1
85	PLAREVO1836-185	Key	6x6x30	2
86	PLAREVO1836-186	Key	8x7x25	1
87	PLAREVO1836-187	Key	8x7x60	1
88	PLAREVO2436-220-188	E-Ring	E24	2
89	PLAREVO1836-189	E-Ring	E15	4
90	PLAREVO1836-190	E-Ring	E5	1
91	PLAREVO1836-191	C-Ring	R22	1
92	PLAREVO1836-192	Socket Head Cap Screw	1/4-20UNCx1"	1
93	PLAREVO1836-193	Hex Cap Screw	3/8-16UNCx1/2"	1
94	PLAREVO2436-220-194	Washer,Lock-Int. Tooth	M3	4
95	PLAREVO1836-195	Socket Head Cap Screw	3/8-16UNCx1"	1
96	PLAREVO1836-196	Knob		1
97	PLAREVO1836-197	Socket Head Cap Screw	5/16-18UNCx1"	8
98	PLAREVO1836-198	Set Screw	5/16-18UNCx3/8"	2
99	PLAREVO1836-199	Set Screw	M8x6	4
100	PLAREVO1836-1100	Set Screw	M4x4	2
101	PLAREVO1836-1101	Set Screw	1/4-20UNCx1/4	4
102	PLAREVO1836-1102	Key	5x5x50	1
103	PLAREVO2436-220-1103	Screw	M4x8	1
104	PLAREVO1836-1104	Screw	M3x8	6
105	PLAREVO1836-1105	Phillips Flat Head Screw	M3x8	2
106	PLAREVO1836-1106	Phillips Flat Head Screw	M6x16	4
107	PLAREVO1836-1107	Screw	M3x4	2
108	PLAREVO1836-1108	Motor Cord		1
109	PLAREVO1836-1109	Flat Washer	D3xD8x1t	2
110	PLAREVO1836-1110	Nylon Insert Lock Nut	M18x2.5	3
111	PLAREVO1836-1111	Hex Nut	3/8-16UNC	4
112	PLAREVO1836-1112	Flat Washer	D10xD23x2t	8
113	PLAREVO1836-1113	Flat Washer	D8xD18x2t	13
114	PLAREVO1836-1114	Lock Washer	5/16"	12
115	PLAREVO1836-1115	Lock Washer	3/8"	5
116	PLAREVO1836-1116	Phillips Flat Head Screw	3/8-16UNCx3/4"	4
117	PLAREVO1836-1117	Strain Relief	7N-2	3
118	PLAREVO1836-1118	Strain Relief	2P-4	1
119	PLAREVO1836-1119	Set Screw	1/4-20UNCx3/8	1
120	PLAREVO1836-1120	Socket Head Button Screw	M8x30	3

121	PLAREVO1836-1121	Socket Head Button Screw	M8x45	1
122	PLAREVO1836-1122	Socket Head Cap Screw	5/16-18UNCx1/2"	2
123	PLAREVO2436-220-1123	Poly-V Belt	PJ8-200	1
124	PLAREVO1836-1124	Set Screw	M6x6	1
125	PLAREVO1836-1125	Set Screw	5/16-18UNCx1/4	1
126	PLAREVO1836-1126	Socket Head Button Screw	3/8-16UNCx5/8"	2
127	PLAREVO1836-1127	Screw	M3x12	2
128	PLAREVO1836-1128	Spacer		2
129	PLAREVO1836-1129	Handle		4
130	PLAREVO1836-1130	Sensor Bracket		1
131	PLAREVO1836-1131	Phillips Flat Head Screw	M3x4	4
132	PLAREVO1836-1132	Knob		1
133	PLAREVO1836-1133	Screw	M3x4	1
134	PLAREVO1836-1134	Screw	M3x8	1
135	PLAREVO1836-1135	Clamp		1
136	PLAREVO1836-1136	Handle, Faceplate		1
137	PLAREVO2436-220-1137	Logo Plate		1
138	PLAREVO1836-1138	Strain Relief	6N-4	4
139	PLAREVO1836-1139	Bracket		1
140	PLAREVO1836-1140	Thimble		1
141	PLAREVO1836-1141	Socket Flat Head Screw	M3x8	1
142	PLAREVO1836-1142	Cord Holder		1
143	PLAREVO1836-1143	O-Ring	P29	2
144	PLAREVO1836-1144	Speed Label		1
145	PLAREVO1836-1145	Cap		4
146	PLAREVO1836-1146	Socket Head Button Screw	1/4-20UNCx3/8"	8
147	PLAREVO2436-220-1147	Headstock Bracket		1
148	PLAREVO1836-1148	Socket Head Cap Screw	3/8-16UNCx1-1/4"	2
149	PLAREVO2436-220-1149	Tailstock Bracket		1
150	PLAREVO1836-1150	Socket Head Cap Screw	3/8-16UNCx3/4"	2
151	PLAREVO1836-1151	Magnet		1
152	PLAREVO1836-1152	Screw	M4x6	8
153	PLAREVO1836-1153	Hex Nut	M4x0.7	1
154	PLAREVO1836-1154	Braking Resistor Cover		1
155	PLAREVO1836-1155	Set Screw	M6x12	2
156	PLAREVO2436-220-1156	Outlet		2
157	PLAREVO2436-220-1157	Relay		1


158	PLAREVO2436-220-1158	Hex Cap Screw	M3x6	1
159	PLAREVO2436-220-1159	Remote Control Panel		1
160	PLAREVO2436-220-1160	Flat Washer	D4xD20x2t	4
161	PLAREVO2436-220-1161	Clamp Bolt		1
162	PLAREVO2436-220-1162	Remote Control Box		1
163	PLAREVO2436-220-1163	Bracket		2
164	PLAREVO2436-220-1164	Remote Control Cord		1
165	PLAREVO2436-220-1165	Screw	M4x12	4
166	PLAREVO2436-220-1166	Screw	M3x6	4
167	PLAREVO2436-220-1167	Flat Washer	D1/4x16x2t	2
168	PLAREVO2436-220-1168	Hex Cap Screw	1/4-20UNCx3/8"	2
169	PLAREVO2436-220-1169	Volt Label		1
170	PLAREVO2436-220-1170	Head/Remote Label		1
171	PLAREVO2436-220-1171	Cable Clamp(NO SHOW)		2
172	PLAREVO2436-220-1172	Rubber Sleeve		2
173	PLAREVO2436-220-1173	Cap		1
174	PLAREVO2436-220-1174	Connector,Remote		1
175	PLAREVO2436-220-1175	Connector,Head		1
176	PLAREVO2436-220-1176	Screw	M5x10	2
177	PLAREVO2436-220-1177	Plate		1
178	PLAREVO2436-220-1178	Tracking Window		1
179	PLAREVO2436-220-1179	Phillips Flat Head Screw	M4x10	4
180	PLAREVO2436-220-1180	Plate		1
181	PLAREVO2436-220-1181	Hex Nut	M5	2
182	PLAREVO2436-220-1182	Relay		1

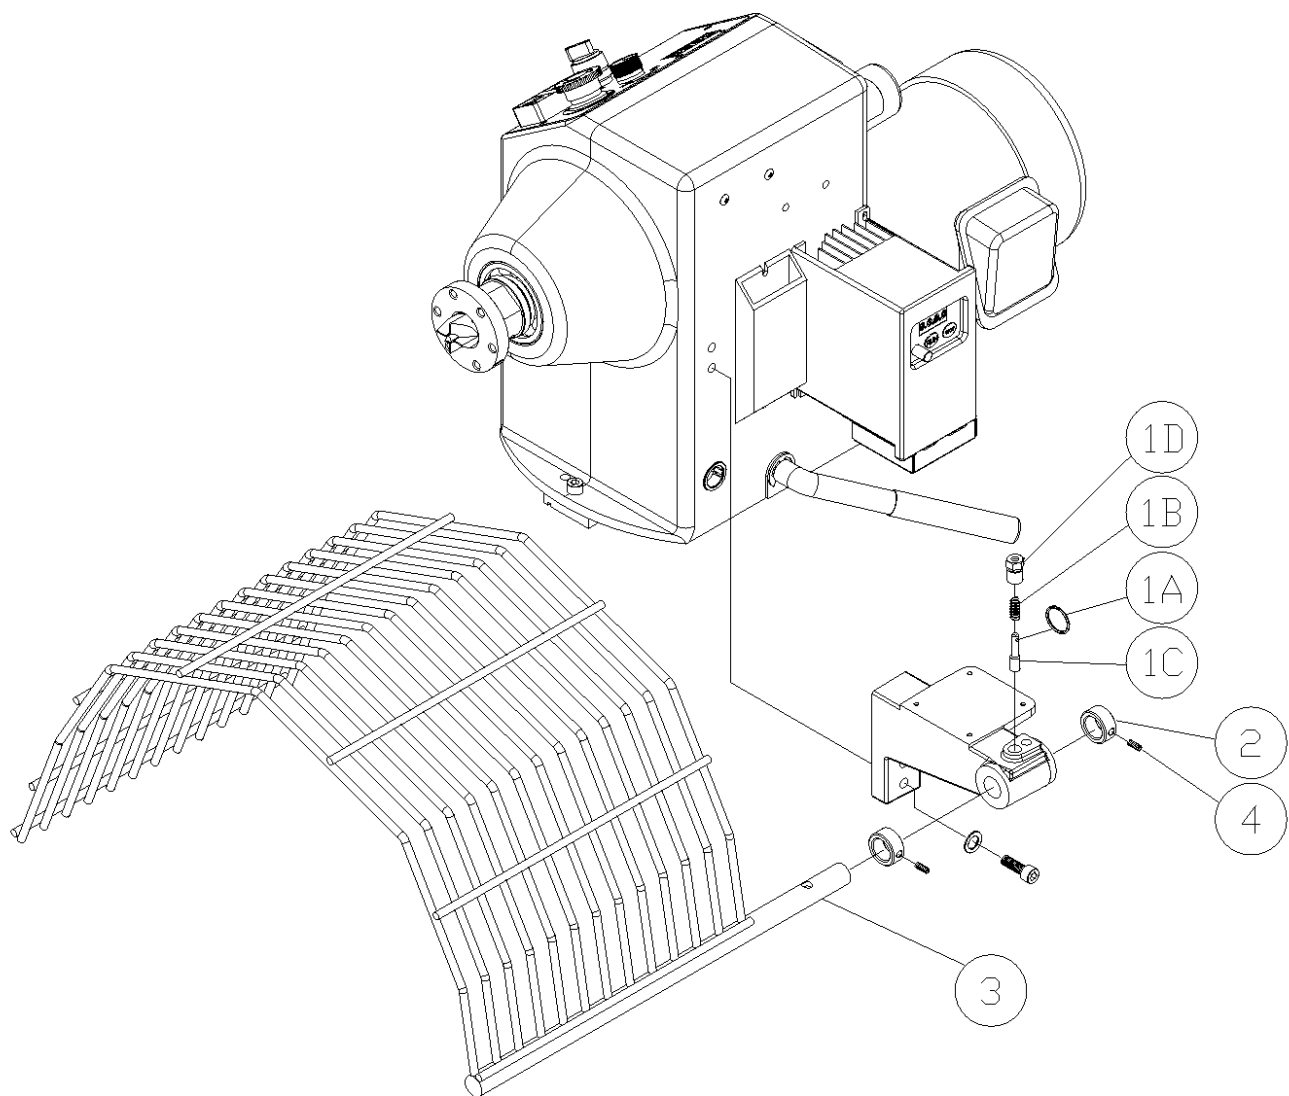

Optional Headstock Guard				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-201	Plunger		1
2	PLAREVO1836-202	Retaining Collar		2
3	PLAREVO2436-203	Guard		1
4	PLAREVO1836-204	Set Screw	1/4-20UNCx1/4"	2

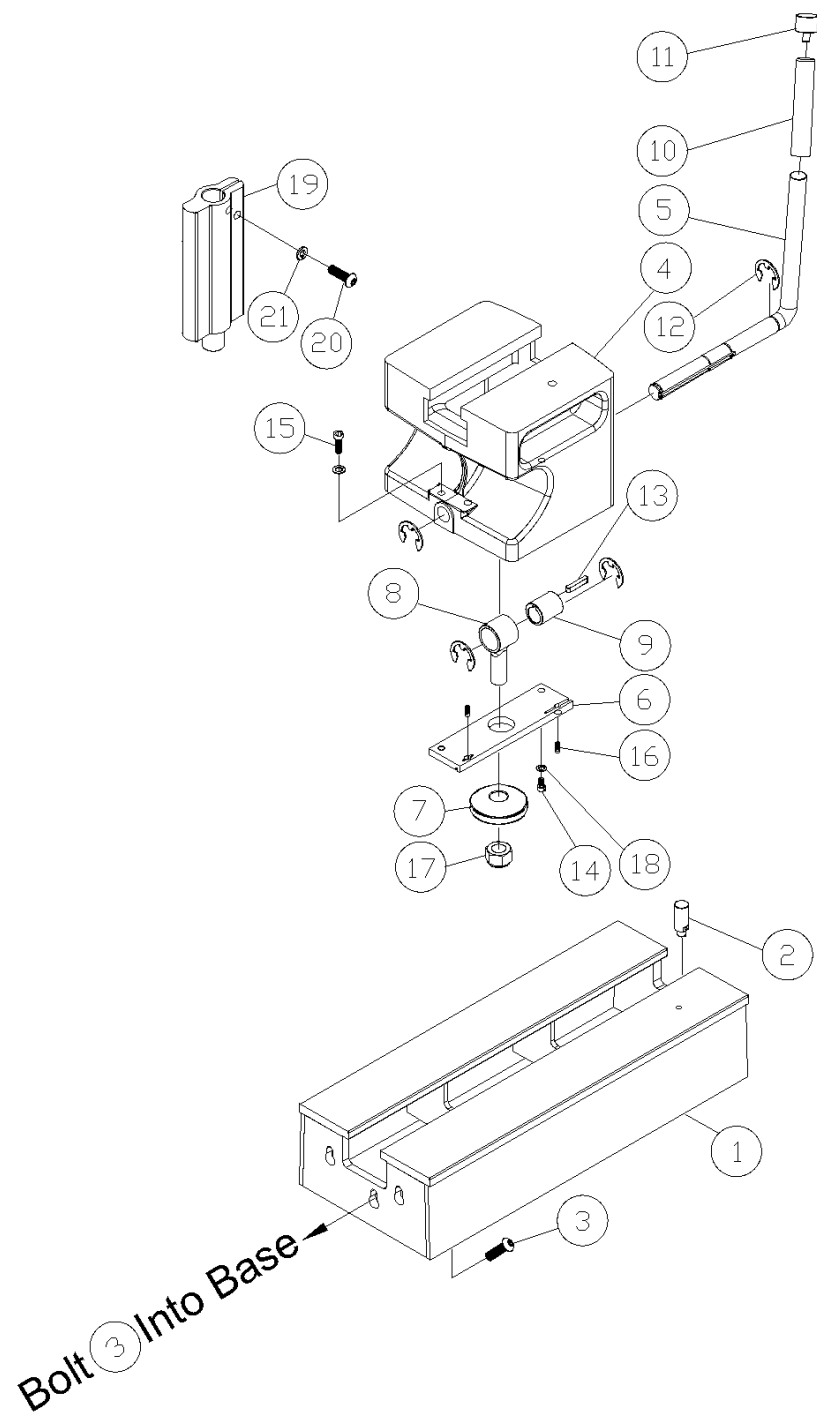


Optional 20" Bed Extension with Riser Block and Tool Rest Extension				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-301	20" Bed Extension		1
2	PLAREVO1836-147	Stop Bolt		2
3	PLAREVO1836-195	Socket Head Cap Screw	3/8-16UNCx1"	3
4	PLAREVO1836-304	Riser Block		1
5	PLAREVO1836-305	Riser Block Locking Handle		1
6	PLAREVO1836-306	Riser Block Adjusting Plate		1
7	PLAREVO1836-119	Clamp		1
8	PLAREVO1836-114	Clamp Bolt		1
9	PLAREVO1836-115	Sleeve		1
10	PLAREVO1836-116	Rubber Sleeve		1
11	PLAREVO1836-1145	Cap		1
12	MPAREVO1836-189	E-Ring	E15	4
13	PLAREVO1836-185	Key	6x6x30	1
14	PLAREVO1836-194	Socket Head Button Screw	M8x20	1
15	PLAREVO1836-315	Socket Head Button Screw	M8x50	1
16	PLAREVO1836-199	Set Screw	M8x6	2
17	PLAREVO1836-1110	Nylon Insert Lock Nut	M18x2.5	1
18	PLAREVO1836-1114	Lock Washer	5/16"	2
19	PLAREVO1836-319	Tool rest Extension		1
20	PLAREVO1836-320	Socket Head Button Screw	3/8-16UNCx1-1/4"	1
21	PLAREVO1836-1115	Lock Washer	3/8"	1

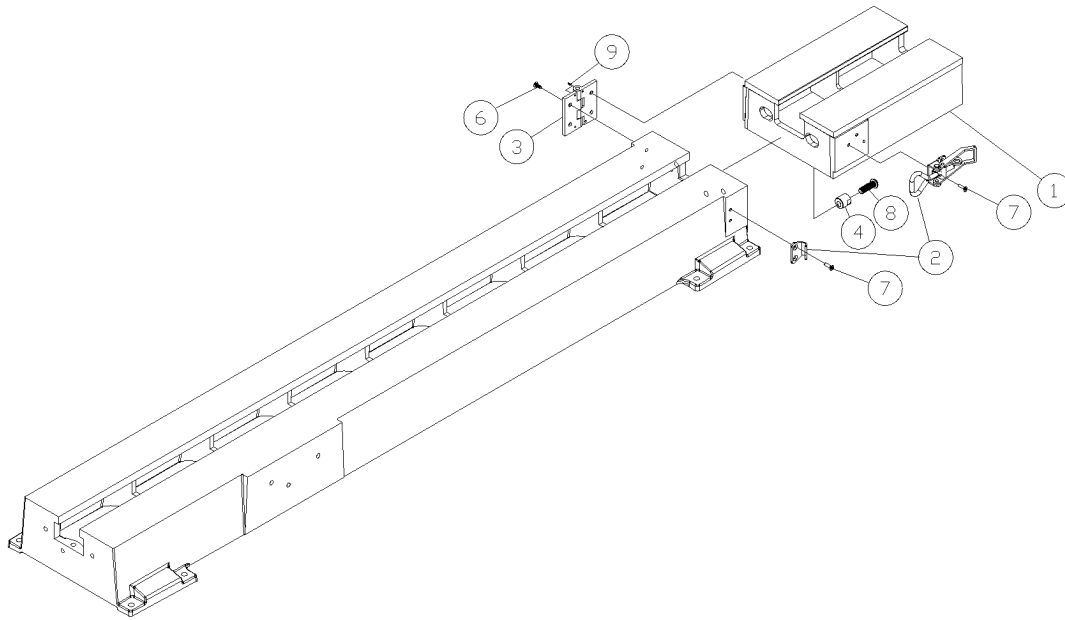


Optional 12" Swing-Away Extension				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-401	12" Bed Extension		1
2	PLAREVO1836-402	Draw Latch Assembly		1
3	PLAREVO1836-403	Hinge		1
4	PLAREVO1836-404	Pin		3
5	PLAREVO1836-147	Stop Bolt		1
6	PLAREVO1836-406	Socket Head Cap Screw	M6x12	4
7	PLAREVO1836-407	Phillips Flat Head Screw	M5x12	5




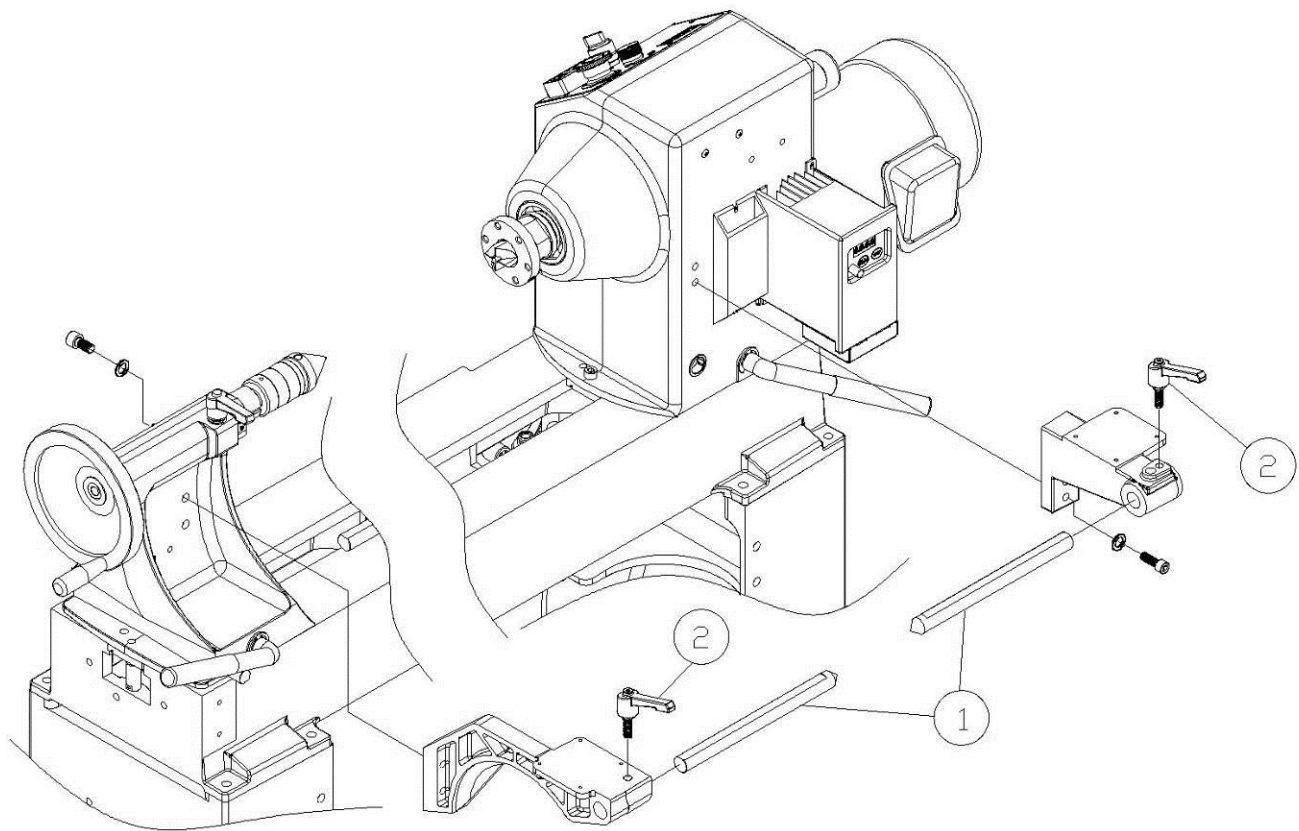


Optional Comparator				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-501	Center		2
2	PLAREVO1836-502	Lock Handle		2

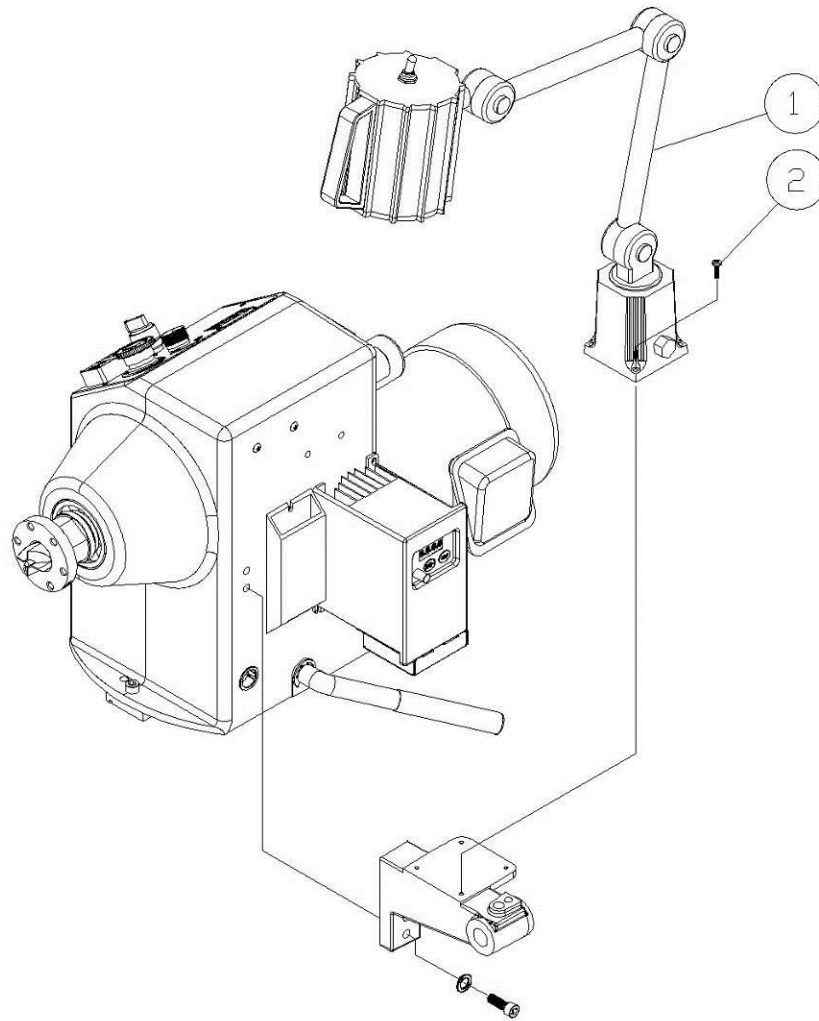


Optional Industrial Flood Light				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-601	Work Light		1
2	PLAREVO1836-602	Screw	M4x15	4

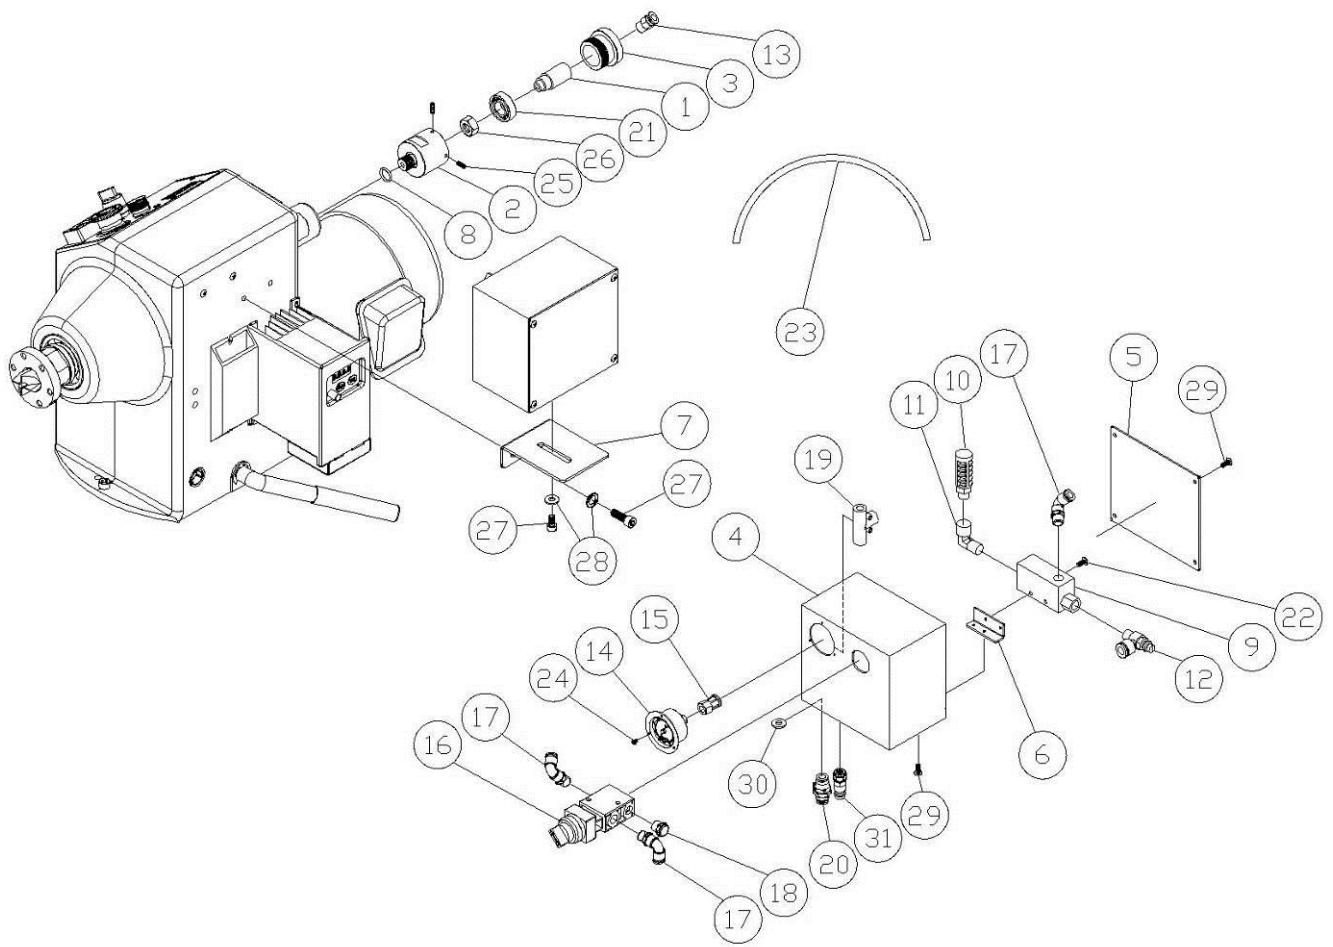

Optional Inverter for Vacuum				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-801	Connecting Shaft		1
2	PLAREVO1836-802	Vacuum Adaptor Body		1
3	PLAREVO1836-803	Cover		1
4	PLAREVO1836-804	Vacuum System Box		1
5	PLAREVO1836-805	Plate		1
6	PLAREVO1836-806	Vacuum Generator Bracket		1
7	PLAREVO1836-807	Vacuum System Bracket		1
8	PLAREVO1836-808	O-Ring	P14	1
9	PLAREVO1836-809	Vacuum Generator		1
10	PLAREVO1836-810	Silencer		1
11	PLAREVO1836-811	L-Type Fitting		1
12	PLAREVO1836-812	Air Flow Regulator		1
13	PLAREVO1836-813	Quick Release Fitting		1
14	PLAREVO1836-814	Pressure Vacuum Gauge		1
15	PLAREVO1836-815	Gauge Fitting		1
16	PLAREVO1836-816	Vacuum Switch		1
17	PLAREVO1836-817	H-Type Fitting		1
18	PLAREVO1836-818	Flat Type Silencer		1
19	PLAREVO1836-819	T-Type Fitting		1
20	PLAREVO1836-820	Straight Fitting-Female		1
21	PLAREVO1836-821	Ball Bearing	6003ZZ	1
22	PLAREVO1836-822	Screw	M4x30	2
23	PLAREVO1836-823	Air Hose		1
24	PLAREVO1836-824	Screw	M2.5x5	3
25	PLAREVO1836-825	Set Screw	M5x5	2
26	PLAREVO1836-826	Hex Nut	M12	1
27	PLAREVO1836-827	Socket Head Cap Screw	5/16-18UNCx1/2"	4
28	PLAREVO1836-1113	Flat Washer	D8xD18x2t	4
29	PLAREVO1836-829	Screw	M4x10	6
30	PLAREVO1836-830	Flat Washer	D1/2"xD26x2.5t	1
31	PLAREVO1836-831	Quick Fitting- Inlet		1

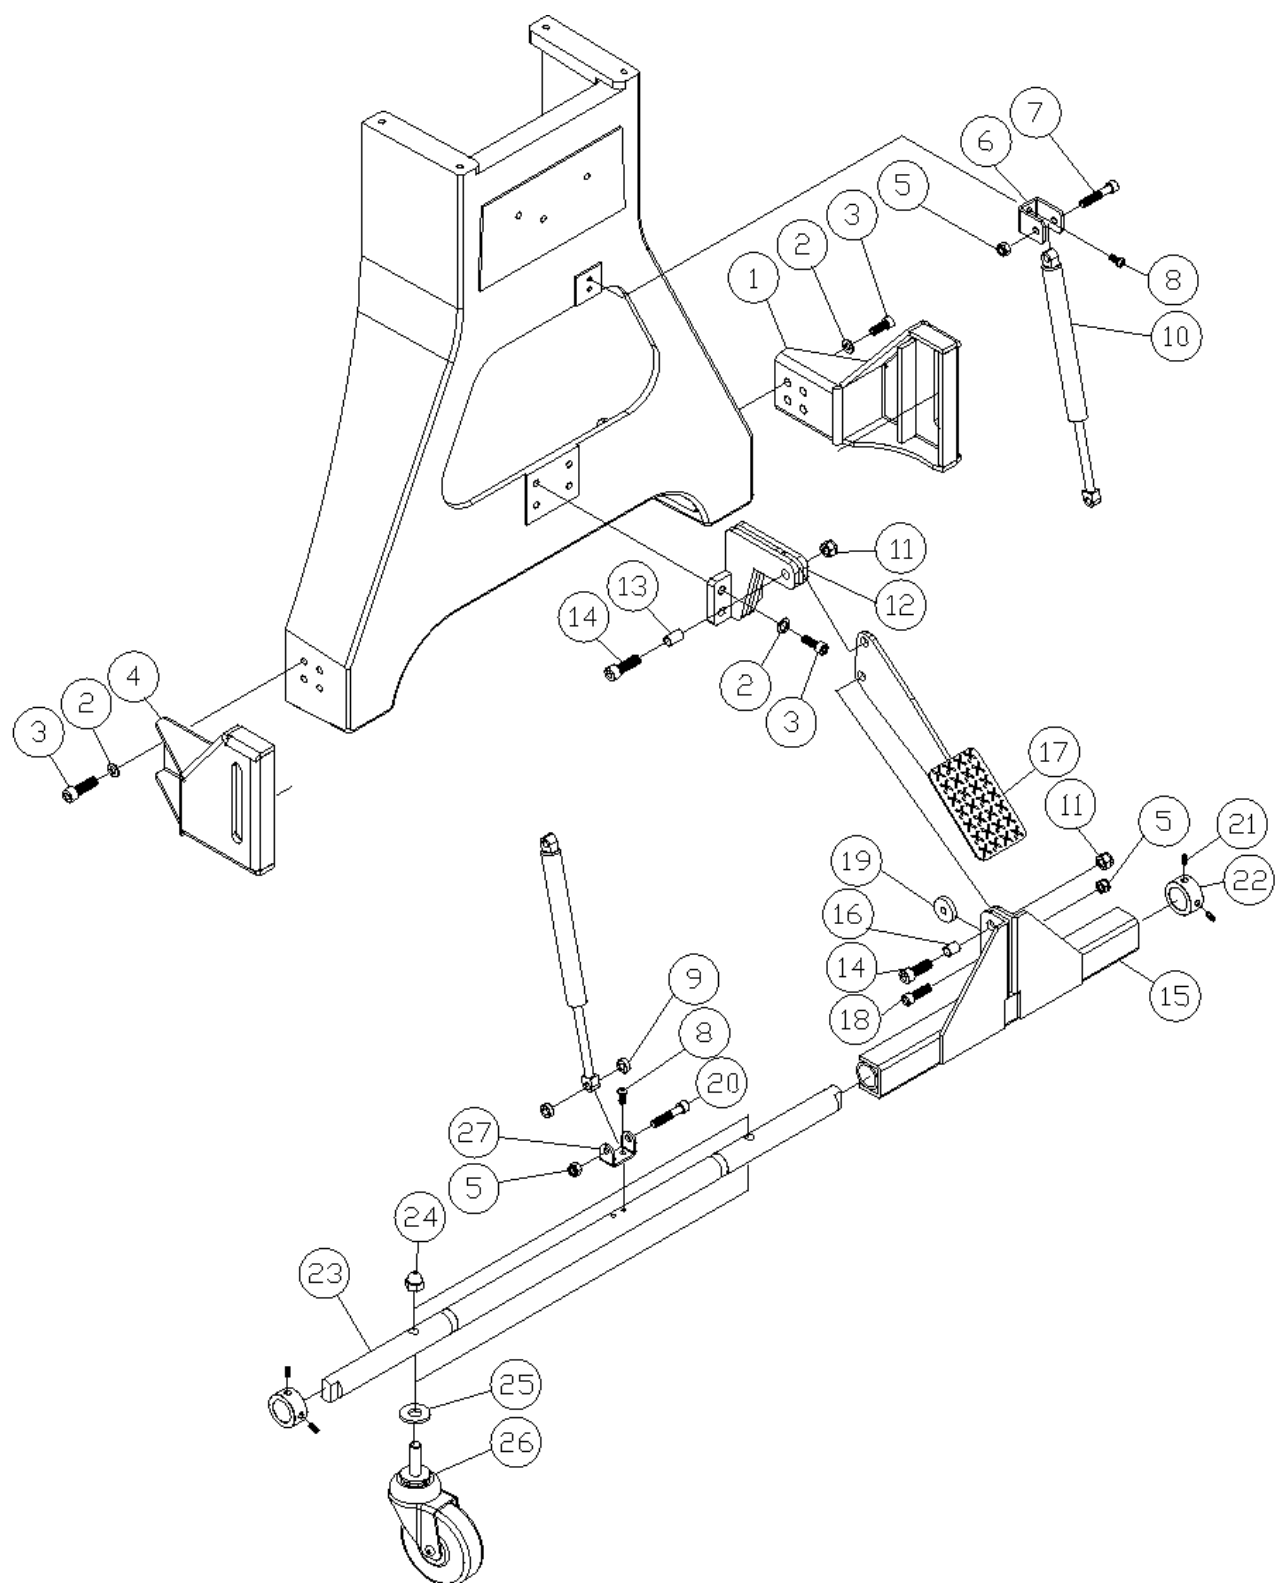

Optional Deluxe Wheel System				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-901	Support Bracket-Right		2
2	PLAREVO1836-1115	Lock Washer	3/8"	24
3	PLAREVO1836-195	Socket Head Cap Screw	3/8-16UNCx1"	24
4	PLAREVO1836-904	Support Bracket-Left		2
5	PLAREVO1836-905	Nylon Insert Lock Nut	M8x1.25	6
6	PLAREVO1836-906	Support Bracket		2
7	PLAREVO1836-907	Socket Head Cap Screw	M8X45mm	2
8	PLAREVO1836-1146	Socket Head Button Screw	1/4-20UNCx3/8"	8
9	PLAREVO1836-909	Spacer		4
10	PLAREVO1836-910	Cylinder		2
11	PLAREVO1836-911	Nylon Insert Lock Nut	M10x1.5	4
12	PLAREVO1836-912	Support Bracket		2
13	PLAREVO1836-913	Bushing		2
14	PLAREVO1836-914	Socket Head Cap Screw	M10x35mm	4
15	PLAREVO1836-915	Connecting rod		2
16	PLAREVO1836-916	Bushing		2
17	PLAREVO1836-917	Foot Brake		2
18	PLAREVO1836-918	Socket Head Cap Screw	M8X30mm	2
19	PLAREVO1836-919	Bushing		2
20	PLAREVO1836-920	Socket Head Cap Screw	M8X50mm	2
21	PLAREVO1836-199	Set Screw	M8x6	8
22	PLAREVO1836-922	Spacer		4
23	PLAREVO1836-923	Rod		2
24	PLAREVO1836-924	Nut	1/2"-12UNC	4
25	PLAREVO1836-925	Flat Washer	1/2"	4
26	PLAREVO1836-926	Caster		4
27	PLAREVO1836-927	Support Bracket		2

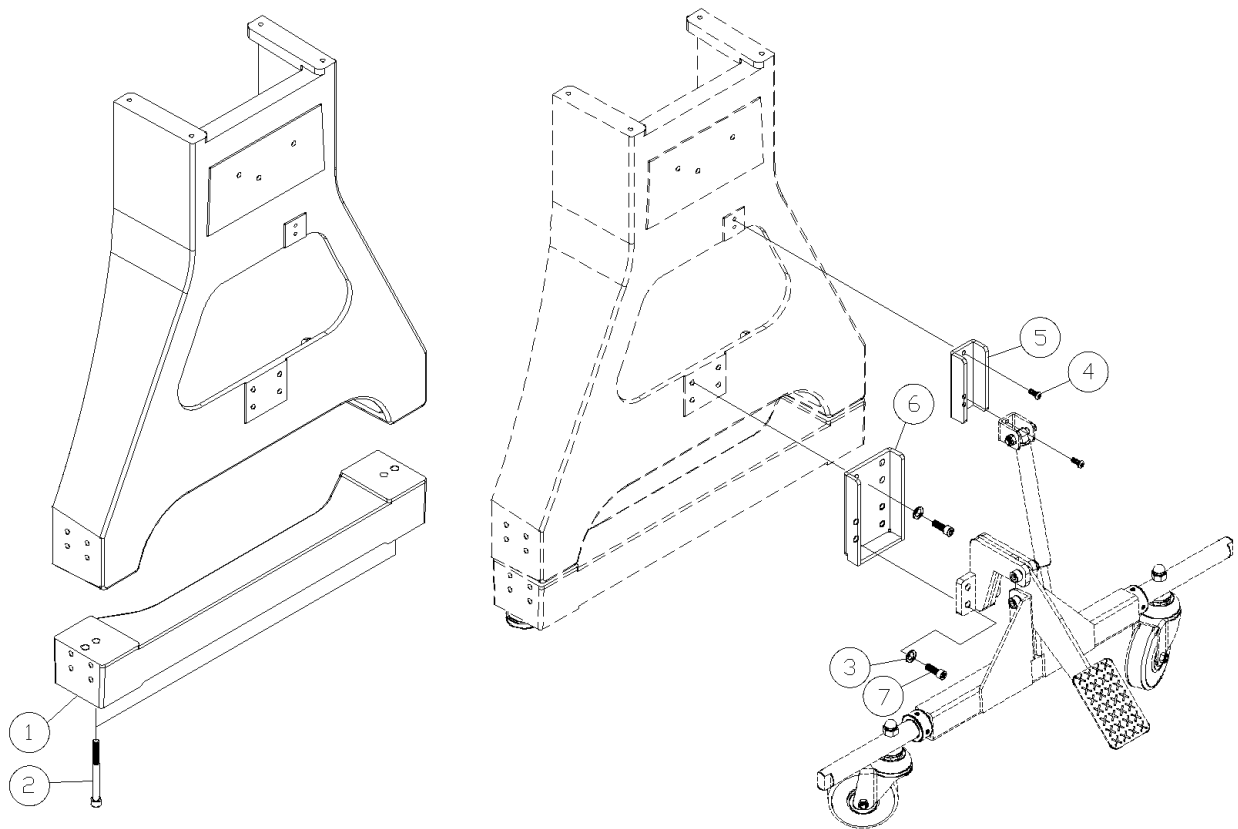

Optional 3" Riser Blocks				
Index	Part Number	Item Description	Specification	Qty
1	PLAREVO1836-701	3" Riser Blocks		2
2	PLAREVO1836-702	Socket Head Cap Screw	3/8-16UNCx3-1/2"	4
3	PLAREVO1836-1115	Lock Washer	3/8"	8
4	PLAREVO1836-1146	Socket Head Button Screw	1/4-20UNCx3/8"	4
5	PLAREVO1836-705	Support Bracket		2
6	PLAREVO1836-706	Support Bracket		2
7	PLAREVO1836-707	Socket Head Cap Screw	3/8-16UNCx3/4"	8







2072 Alton Parkway Irvine, CA 92606 U.S.A.  
825 Bistline Drive, West Columbia, SC 29172 U.S.A  
For Customer Service: +1 (949) 474-1200 or email [customerservice@lagunatools.com](mailto:customerservice@lagunatools.com)

Laguna Tools is not responsible for errors or omissions. Specifications subject to change. Machines may be shown with optional accessories.

© 2018, Laguna Tools, Inc. LAGUNA® and the LAGUNA Logo® are the registered trademarks of Laguna Tools, Inc. All rights reserved.